



**JWP-208K
JWP-208K HH**

WOOD PLANER

JR039400V 50Hz 3Ph

PARTS LIST



Импортер в РФ: ООО «ИТА Технолоджи»

105082, Москва, Переведеновский пер., д. 17


www.jettools.ru

Made in PRC

P-JR039

2025.10

Parts Breakdown for JWP-208K/JWP-208K HH Wood Planer---Headstock

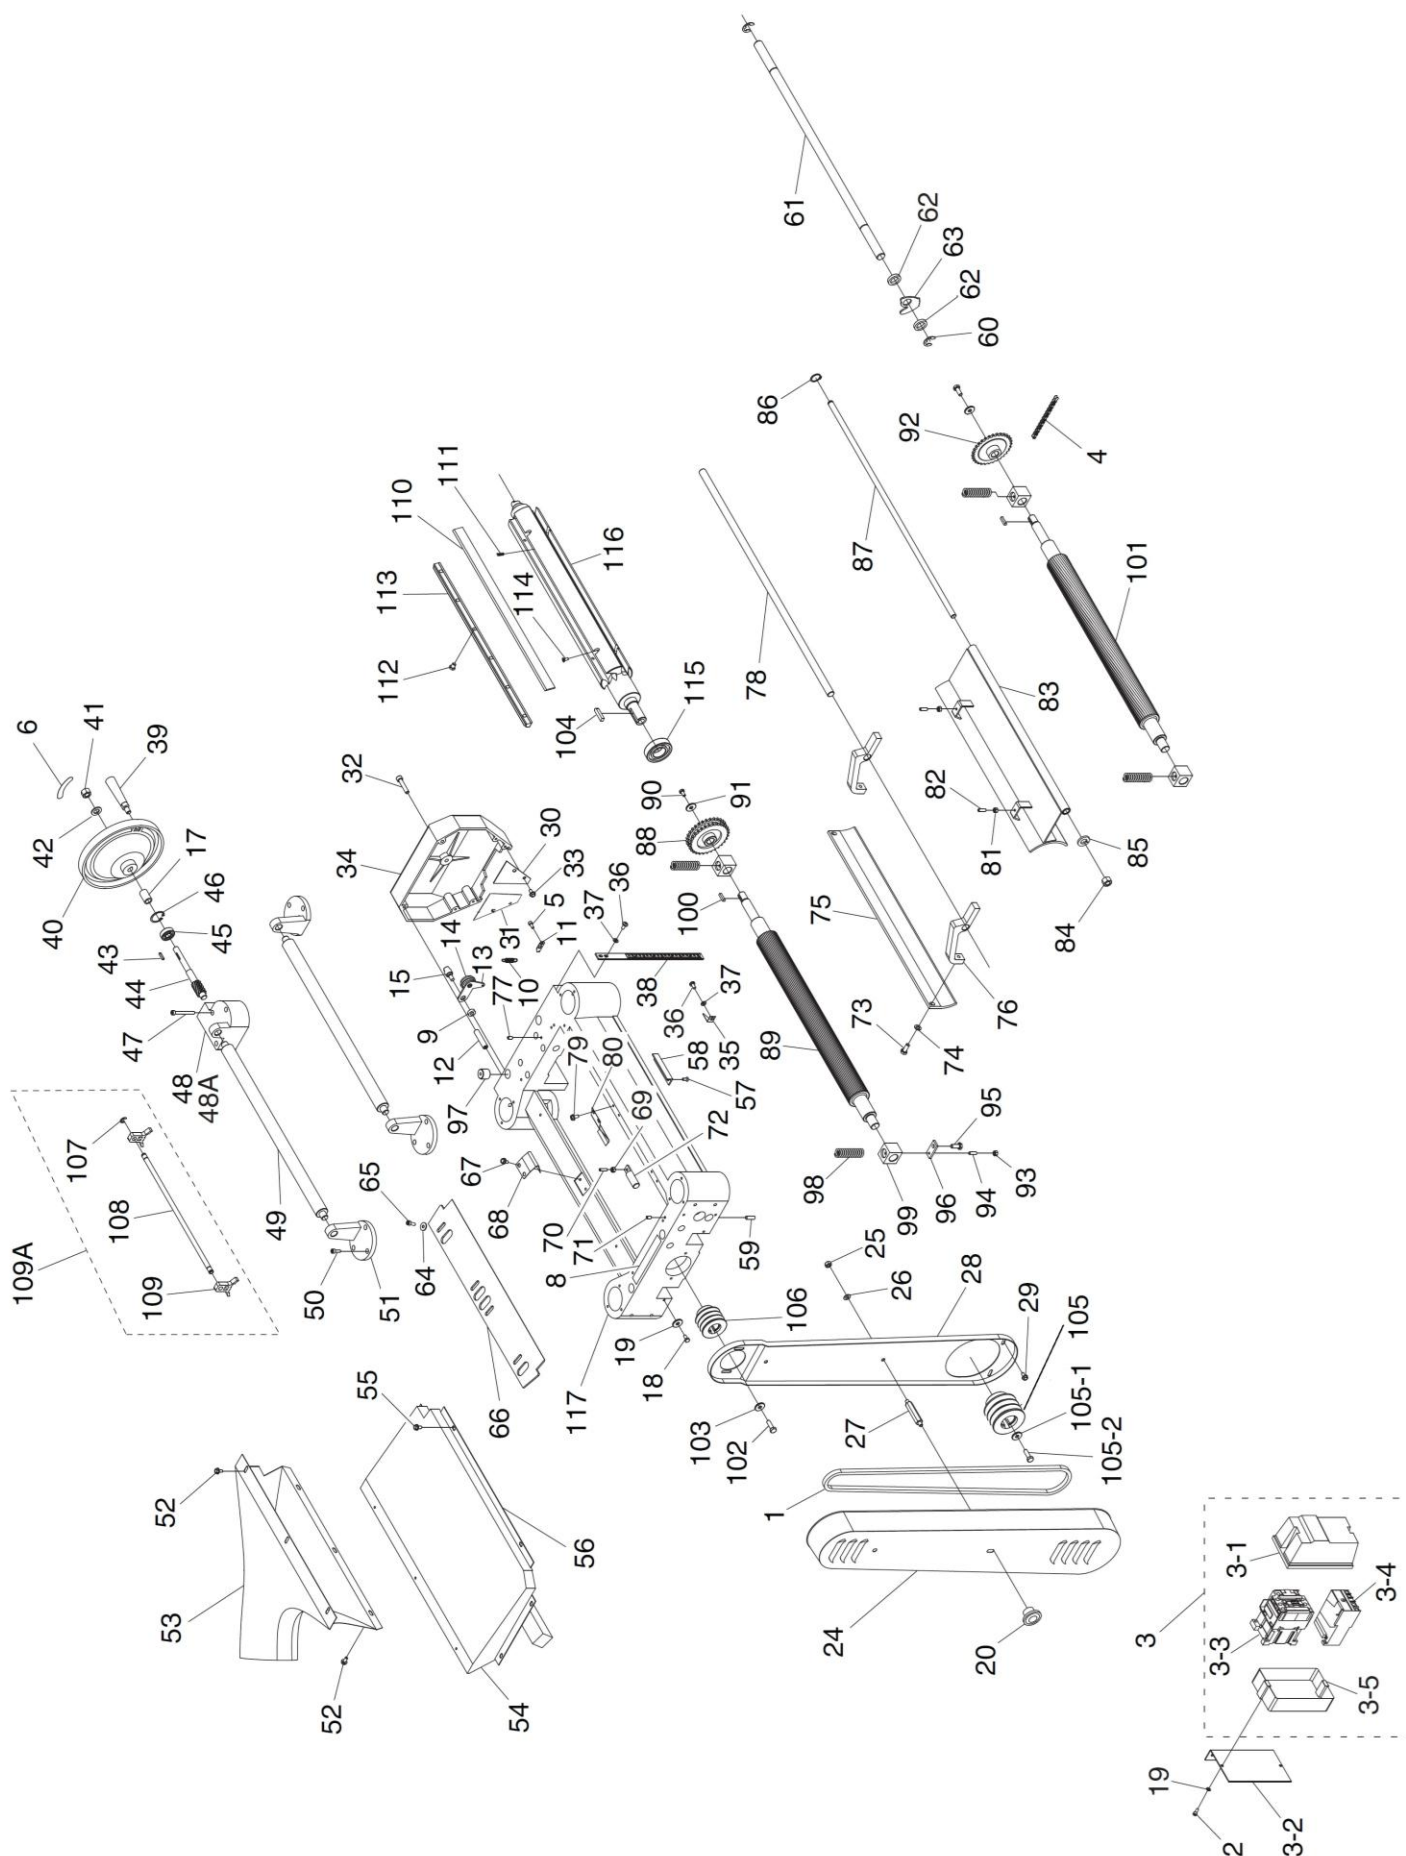

Parts List for JWP-208K/JWP-208K HH Wood Planer---- Headstock

Index No.	Part No.	Description	Size	Qty.
1	JWP208K-001	Cogged V-Belt	MX-60	3
2	GB70.1	Socket Head Cap Screw	M6 x 12	2
3	JWP208K-003A	Magnetic Switch Assembly (400V 50Hz)		2
3-1	JWP208K-003.1	Magnetic Switch Front Cover		1
3-2	JWP208K-003.2	Magnetic Switch Bracket		1
3-3	JWP208K-003.3	Contacto		1
3-4	JWP208K-003.4	OL Relay		1
3-5	JWP208K-003.5	Magnetic Switch Rear Cover		1
4	JWP208K-004	Chain Links	06B-1 x 67	1
5	GB70.1	Socket Head Cap Screw	M6 x 10	2
6	JWP208K-006	Handwheel Label		1
8	JWP208K-008	Oil Level Label		2
9	JWP208K-009	Idler Bracket Collar		1
10	JWP208K-010	Extension Spring		1
11	JWP208K-011	Hanger		1
12	JWP208K-012	Shaft		2
13	JWP208K-013	Bracket		1
14	JWP208K-014	Idler Pulley		1
15	JWP208K-015	Idler Mounting Shaft		1
17	JWP208K-017	Handwheel Collar		1
18	GB5781	Hex Cap Screw	M6x12	4
19	GB96	Flat Washer	6 mm	4
20	JWP208K-020	Star Knob	M8	2
24	JWP208K-024	Belt Cover		1
25	GB6170	Hex Nut	M8	2
26	GB96	Flat Washer	8 mm	2
27	JWP208K-027	Hex Standoff		2
28	JWP208K-028	Belt Guard		1
29	JWP208K-029	Flange Bolt	M6 x 10	4
30	JWP208K-030	Safety Hatch A		1
31	JWP208K-031	Safety Hatch B		1
32	GB70.1	Socket Head Cap Screw	M8 x 40	1
33	JWP208K-033	Flange Bolt	M6 x 10	4
34	JWP208K-034	Chain Drive Cover		1
35	JWP208K-035	Cut Limiter Pointer		1
36	GB818	Philip Head Screw	M6 x 12	3
37	GB96	Flat Washer	6 mm	3
38	JWP208K-038	Handwheel Scale		1
39	JWP208K-039	Handwheel Handle		1
40	JWP208K-040	Handwheel		1
41	GB6170	Hex Nut	M12	1
42	GB96	Flat Washer	12 mm	1
43	JWP208K-043	Key	4 x 4 x 20	1
44	JWP208K-044	Worm Gear		1
45	GB276	Ball Bearing	6201-2RS	1
46	JWP208K-046	Internal Retaining Ring	32 mm	1
47	GB70.1	Socket Head Cap Screw	M5 x 55	3
48	JWP208K-048	Worm Housing		1
48A	JWP208K-048A	Worm Housing Assembly		1
49	JWP208K-049	Return Roller		2
50	GB70.1	Socket Head Cap Screw	M6x 16	9
51	JWP208K-051	Roller Stand		3
52	JWP208K-052	Flange Bolt	M6x12	6
53	JWP208K-053	Dust Hood		1
54	JWP208K-054	Top Cover Gasket		1
55	JWP208K-055	Flange Bolt	M6 x 12	6
56	JWP208K-056	Top Cover		1


Parts List for JWP-208K/JWP-208K HH Wood Planer ---- Headstock

Index No.	Part No.	Description	Size	Qty.
57	GB5781	Hex Cap Screw	M5x12	2
58	JWP208K-058	Cutting Limit Plate		1
59	GB78	Socket Set Screw	M8 x 12	1
60	JWP208K-060	E-Clip	15 mm	2
61	JWP208K-061	Anti-Kickback Finger Shaft		1
62	JWP208K-062	Anti-Kickback Shaft Collar		57
63	JWP208K-063	Anti-Kickback Finger		56
64	GB96	Flat Washer	6 mm	4
65	JWP208K-065	Flange Bolt	M6 x 15	4
66	JWP208K-066	Chip Deflector Plate		1
67	JWP208K-067	Flange Bolt	M6 x 12	2
68	JWP208K-068	Hold Down Plate		1
69	GB6170	Hex Nut	M6	2
70	GB78	Socket Set Screw	M6 x 20	2
71	GB78	Socket Set Screw	M6 x 12	2
72	JWP208K-072	Adjusting Shaft		3
73	GB5781	Hex Cap Screw	M8x20	2
74	GB96	Lock Washer	8mm	2
75	JWP208K-075	Pressure Bar		1
76	JWP208K-076	Chip Breaker Bracket		2
77	GB78	Socket Set Screw	M6 x 16	1
78	JWP208K-078	Pressure Plate Shaft		1
79	JWP208K-079	Flange Bolt	M6 x 12	6
80	JWP208K-080	Plate Spring		3
81	GB6170	Hex Nut	M6	2
82	GB78	Socket Set Screw	M6 x 20	2
83	JWP208K-083	Chip Breaker		1
84	GB6170	Hex Nut	M12	1
85	GB93	Lock Nut	12mm	1
86	GB5781	Ext Retaining Ring	12mm	1
87	JWP208K-087	Lock Rod		1
88	JWP208K-088	Outfeed Roller Sprocket		1
89	JWP208K-089	Outfeed Roller		1
90	GB5781	Hex Cap Screw	M6x16	2
91	GB96	Flat Washer	6 mm	2
92	JWP208K-092	Infeed Roller Sprocket		1
93	GB6170	Hex Nut	M6	4
94	GB78	Socket Set Screw	M6 x 20	4
95	GB5781	Hex Cap Screw	M8x20	4
96	JWP208K-096	Adjustment Plate		4
97	JWP208K-097	Oiler Set Screw		4
98	JWP208K-098	Compression Spring		4
99	JWP208K-099	Feed Roller Block		4
100	JWP208K-100	Key 5 X 5 X 22		2
101	JWP208K-101	Infeed Roller		2
102	GB5781	Hex Cap Screw	M8x25	1
103	JWP208K-103	Cutter Pulley Flat Washer		1
104	JWP208K-104	Key 8 X 8 X 35		1
105	JWP208K-105	Motor Pulley		1
105-1	JWP208K-105.1	Motor Pulley Washer		1
105-2	JWP208K-105.2	Tapered Head Screw	M10 x 20	1
106	JWP208K-106	Cutterhead Pulley		1
107	JWP208K-107	E-Clip 8mm	8 mm	4
108	JWP208K-108	Knife Jig Shaft		1
109	JWP208K-109	Knife Jig Foot		2
109A	JWP208K-109A	Knife Setting Jig Assembly		1

Parts List for JWP-208K/JWP-208K HH Wood Planer ---- Headstock


Index No.	Part No.	Description	Size	Qty.
110	JWP208K-110A	Knives 508 X 25.4 X 3mm / 4-PC Set	508 x 25.4 x 3	4
111	JWP208K-111	Compression Spring		8
112	JWP208K-112	Gib Screw		24
113	JWP208K-113	Gib		4
114	JWP208K-114	Jack Screw	M5X 12	8
115	JWP208K-115	Ball Bearing 6206zz	6206-2RS	1
116	JWP208K-116	Cutterhead 20" 4-Knife		1
117	JWP208K-117	Head Casting		1
124	JWP208K-124	Power Cord		1

Parts Breakdown for JWP-208K HH Wood Planer -- Helical Cutterhead

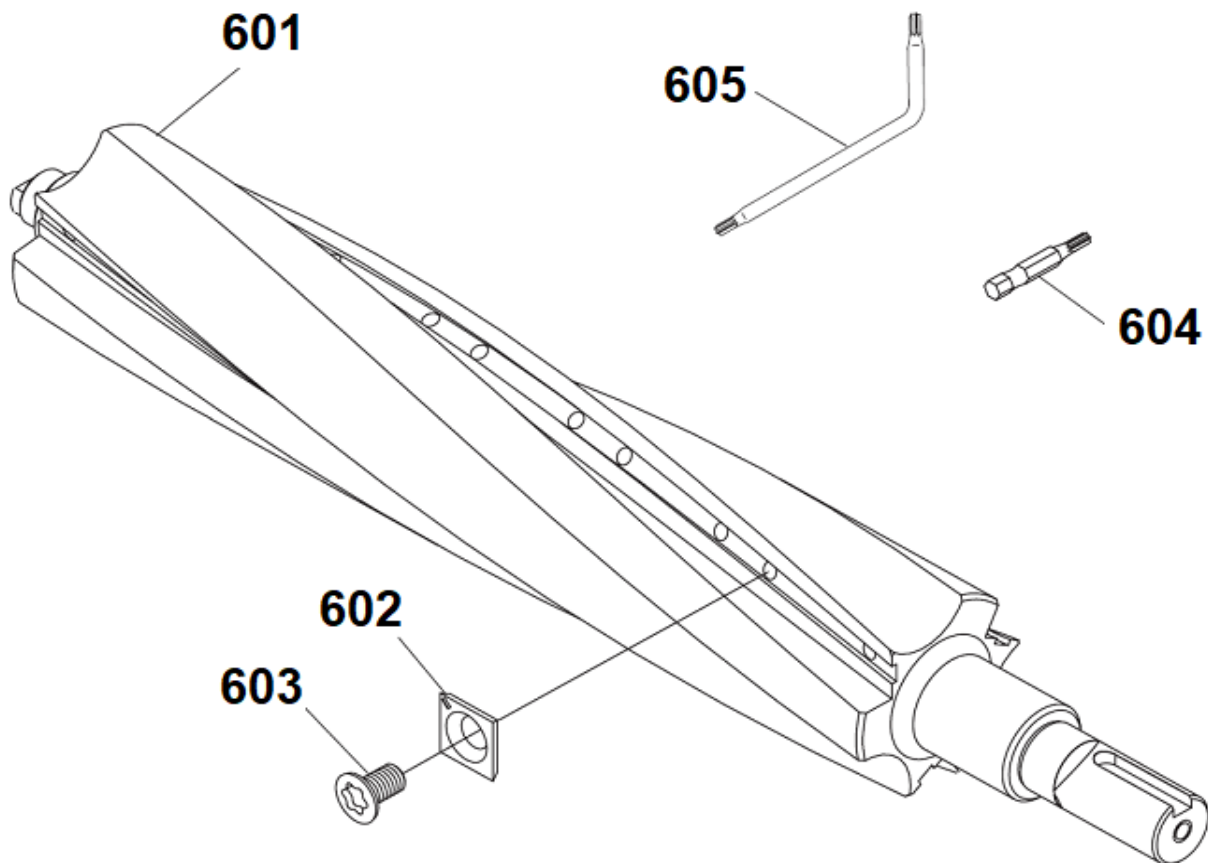


Index No.	Part No.	Description	Size	Qty.
	JWP208K-001HA	Helical Cutterhead Assembly (Include #1~5)		1
601	JWP208K-601H	Helical Cutterhead		1
602	10000101	Cutterhead Tip Insert (Blade)	15x15x2.5-R101/30	5
603	JWP15K-603	Flat Head Torx Screw	T20 M6x15	5
604	JWP15K-604	Torx Bit	T20	2
605	JWP15K-605	L-Wrench Torx	T20	2

Parts Breakdown for JWP-208K/JWP-208K HH Wood Planer --- Table

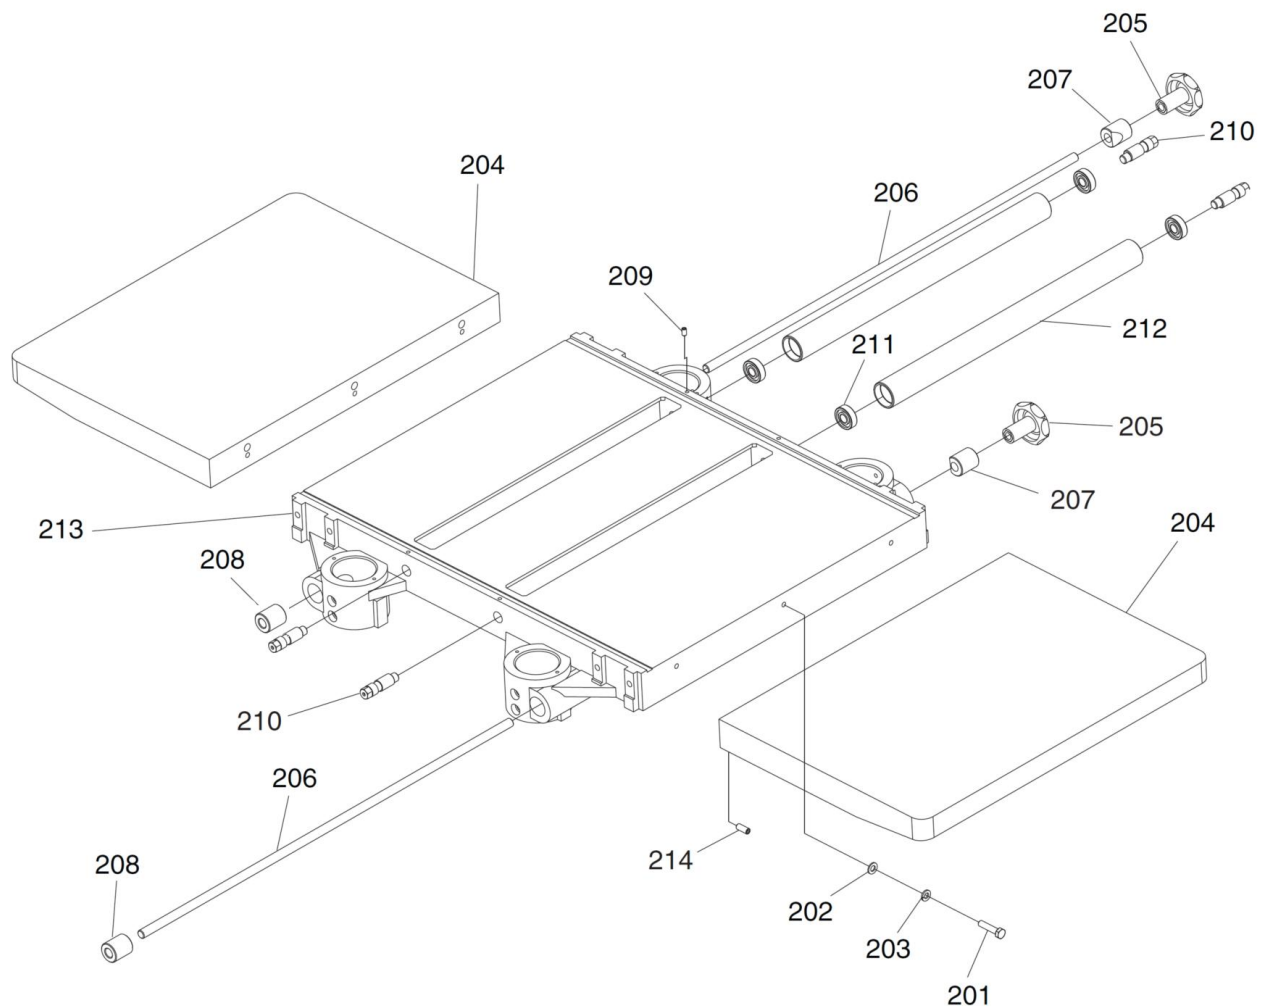


Index No.	Part No.	Description	Size	Qty.
201	GB5783	Hex Cap Screw	M8x35	6
202	GB96	Flat Washer	8 mm	6
203	GB93	Lock Washer	8 mm	6
204	JWP208K-204	Table Extension Wing		2
205	JWP208K-205	Star Knob	M12	2
206	JWP208K-206	Lock Bolt		2
207	JWP208K-207	Gib		2
208	JWP208K-208	Wedge Dog		2
209	GB78	Socket Set Screw	M6 x 12	4
210	JWP208K-210	Eccentric Shaft		4
211	GB276	Ball Bearing	6201-2RS	4
212	JWP208K-212	Bed Roller		2
213	JWP208K-213	Main Table		1
214	GB78	Socket Set Screw	M8x20	2

Parts Breakdown for JWP-208K / JWP-208K HH Wood Planer --- Columns

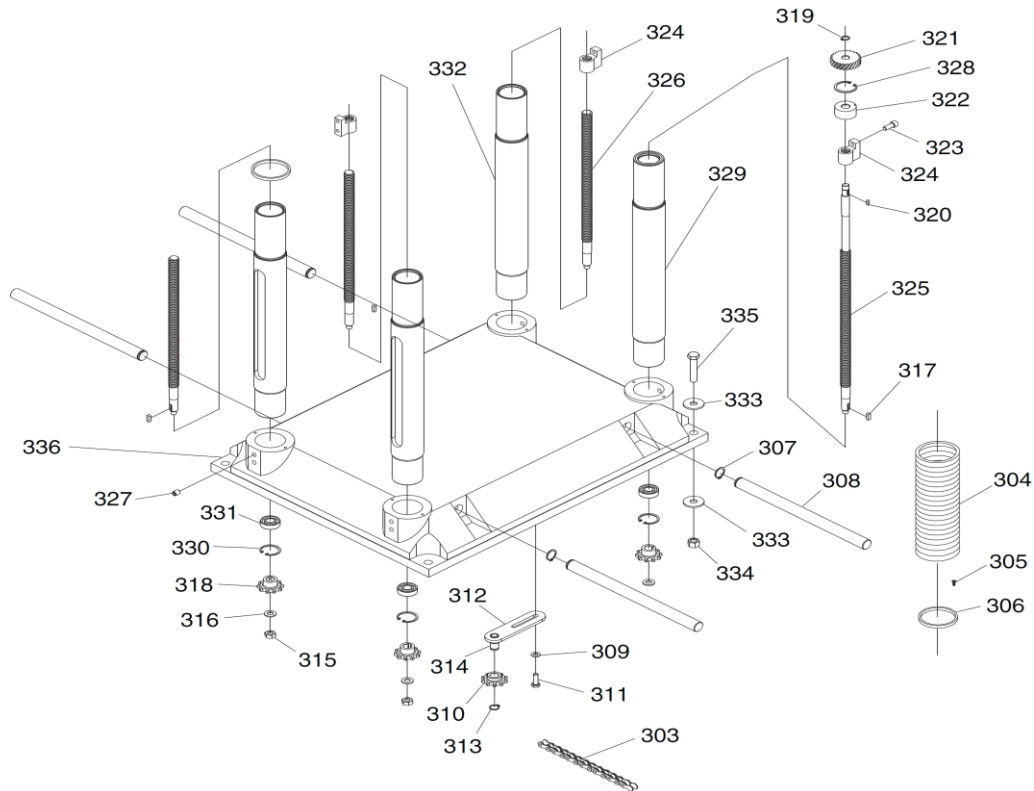

Index No.	Part No.	Description	Size	Qty.
303	JWP208K-303	Chain 08A-1 X1 66		1
304	JWP208K-304	Dust Boot		8
305	GB818	Pan Head Cap Screw	M5x10	32
306	JWP208K-306	Dust Boot Seal		16
307	JWP208K-307	Extension Retaining Ring	21mm	4
308	JWP208K-308	Lifting Bar		4
309	GB96	Flat Washer	8 mm	2
310	JWP208K-310	Sprocket		1
311	GB5781	Hex Cap Screw	M8x25	2
312	JWP208K-312	Bracket		1
313	JWP208K-313	Extension Retaining Ring	15 mm	1
314	JWP208K-314	Shaft		1
315	GB6170	Hex Nut	M10	4
316	GB96	Flat Washer	10 mm	4
317	JWP208K-317	Key	5 x 5 x 16	4
318	JWP208K-318	Sprocket		4
319	JWP208K-319	Extension Retaining Ring	12 mm	1
320	JWP208K-320	Key	4 x 4 x 12	1
321	JWP208K-321	Gear		1
322	JWP208K-322	Bushing		1
323	GB70.1	Socket Head Cap Screw	M8 x 20	8
324	JWP208K-324	Lead Screw Nut		4
325	JWP208K-325	Primary Lead Screw		1
326	JWP208K-326	Secondary Lead Screw		3
327	GB78	Socket Set Screw	M10x12	16
328	JWP208K-328	Inter Retaining Ring	38mm	1
329	JWP208K-329	Primary Column		1
330	JWP208K-330	Inter Retaining Ring	35 mm	4
331	GB276	Ball Bearing	6202-2RS	4
332	JWP208K-332	Secondary Column		3
333	GB96	Flat Washer	12mm	8
334	GB6170	Hex Nut	M12	4
335	GB5783	Hex Cap Screw	M12 x 45	4
336	JWP208K-336	Base		1


Parts Breakdown for JWP-208K/JWP-208K HH Wood Planer -- Cabinet Stand

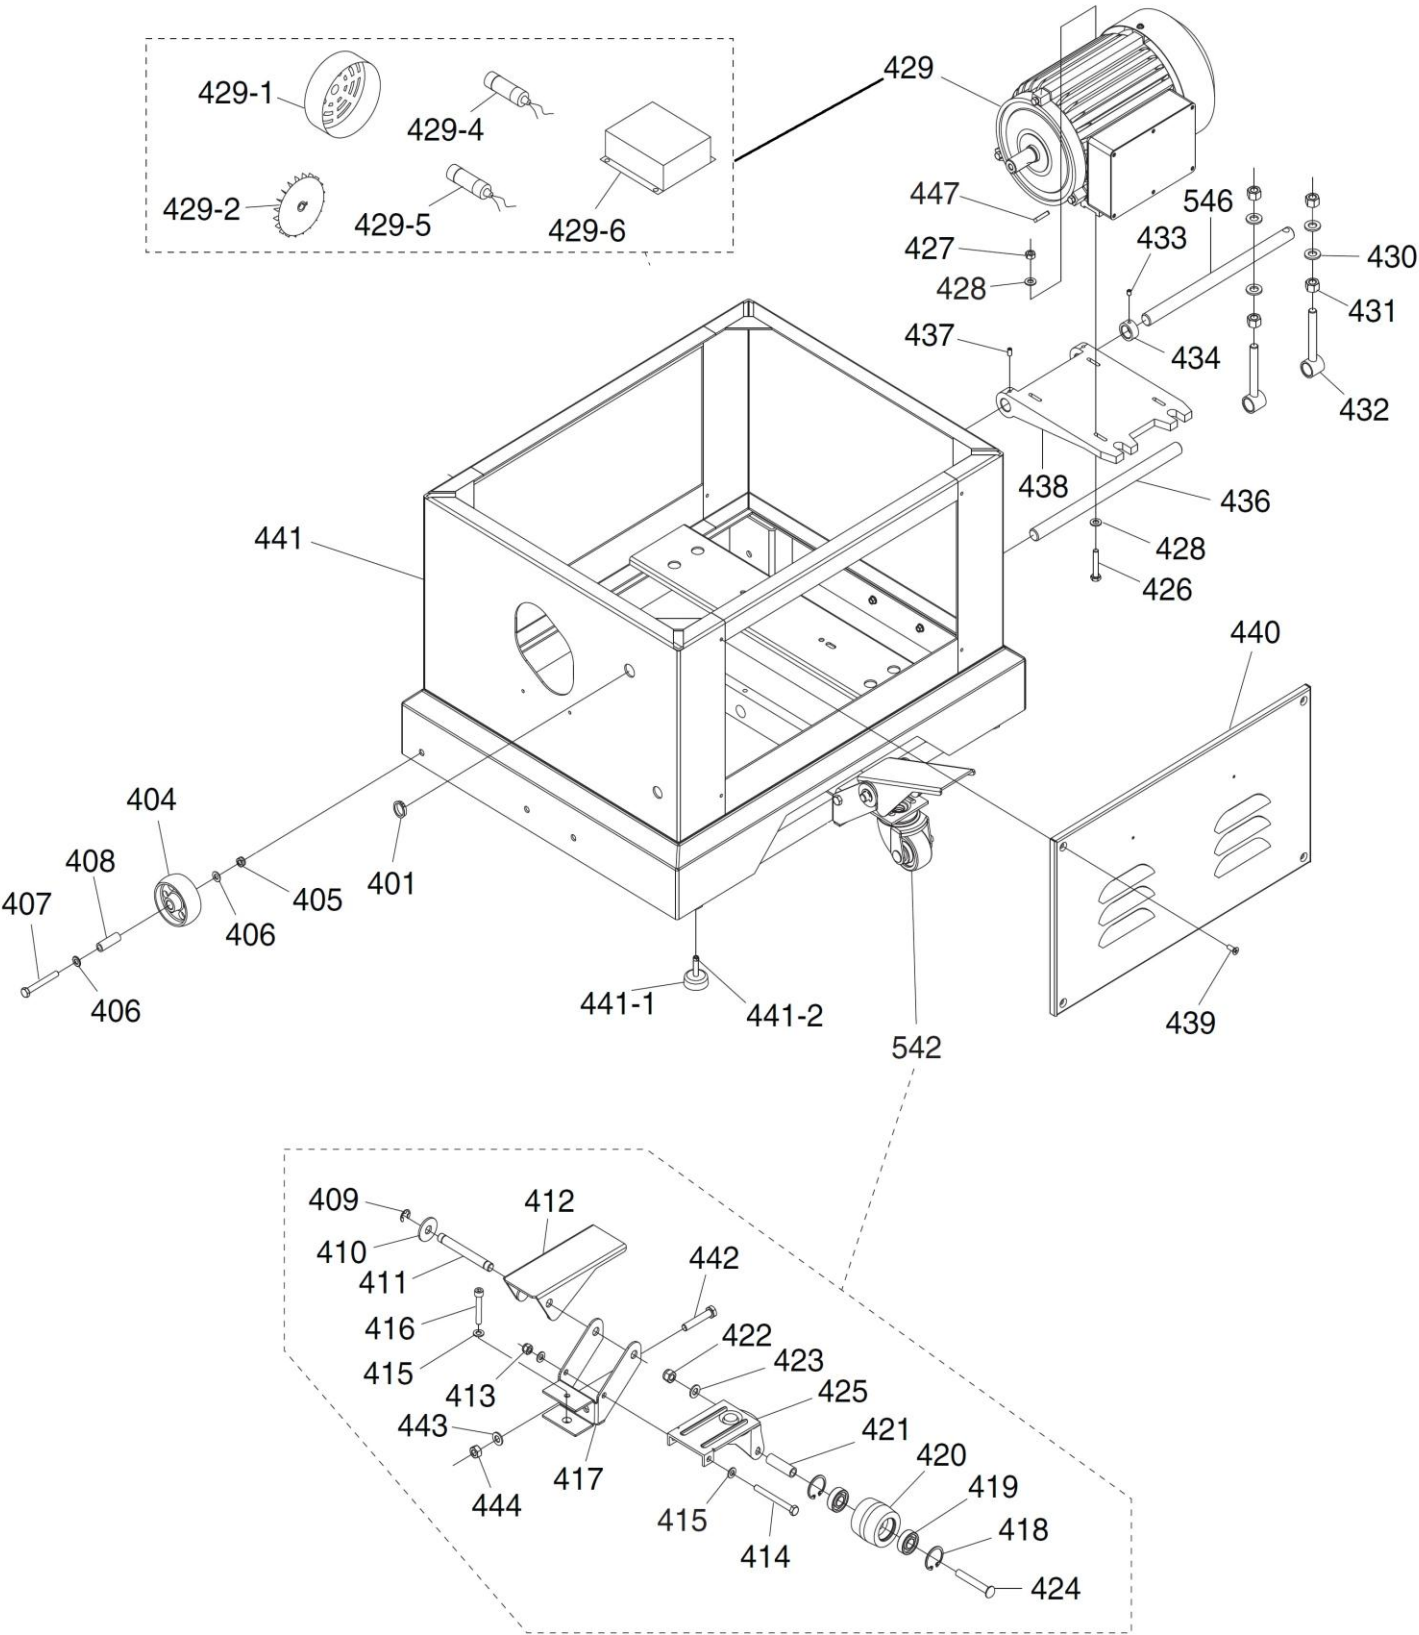

Parts List for JWP-208K/JWP-208K HH Wood Planer -- Cabinet Stand

Index No.	Part No.	Description	Size	Qty.
401	JWP208K-401	Relief Bushing		1
404	JWP208K-404	Universal Wheel 78mm Dia		2
405	GB6170	Hex Nut	M8	2
406	GB96	Flat Washer	8 mm	4
407	GB5781	Hex Cap Screw	M8 x 65	2
408	JWP208K-408	Sleeve		2
409	JWP208K-409	E-Clip	9mm	2
410	GB96	Flat Washer	12 mm	2
411	JWP208K-411	Shaft		1
412	JWP208K-412	Pedal		1
413	GB6170	Hex Nut	M8	1
414	GB5781	Hex Cap Screw	M8 x 100	1
415	GB96	Flat Washer	8 mm	3
416	GB5781	Hex Cap Screw	M8 x 50	1
417	JWP208K-417	Bracket		1
418	JWP208K-418	Internal Retaining Ring	35 mm	4
419	GB276	Ball Bearing	6202-2RS	2
420	JWP208K-420	Trolley Wheel		1
421	JWP208K-421	Trolley Wheel Sleeve		1
422	JWP208K-422	Lock Nut	M10	1
423	GB96	Flat Washer	10 mm	1
424	JWP208K-424	Trolley Wheel Bolt		1
425	JWP208K-425	Trolley Universal Kit		1
426	GB5781	Hex Cap Screw	M8 x 45	4
427	GB6170	Hex Nut	M8	4
428	GB96	Flat Washer	8 mm	8
429	JWP208K-429	Motor Assembly	400V, 50Hz	1
429-1	JWP208K-429.1	Motor Fan Cover		1
429-2	JWP208K-429.2	Motor Fan		1
429-4	JWP208K-429.4	Running Capacity		1
429-5	JWP208K-429.5	Starting Capacity		1
429-6	JWP208K-429.6	Junction Box		1
429-7	JWP208K-429.7	Ball Bearing	6206-2RS	1
429-8	JWP208K-429.8	Ball Bearing	6204-2RS	1
429-9	JWP208K-429.9	Centrifugal Switch		1
429-10	JWP208K-429.10	Contact Plate		1
430	GB96	Flat Washer	12 mm	4
431	GB6170	Hex Nut	M12	4
432	JWP208K-432	Adjust Bolt		2
433	GB78	Socket Set Screw	M6 x 8	1
434	JWP208K-434	Connecting Rod Lock Collar		1
436	JWP208K-436	Plate Connecting Rod		1
437	GB78	Socket Set Screw	M6 x 12	2
438	JWP208K-438	Motor Mount Plate		1
439	GB819	Phillip Flat Head Screw	M6 x 20	8
440	JWP208K-440	Cabinet Cover		1
441	JWP208K-441	Cabinet Stand		1
441-1	GB6170	Hex Nut	M8	2
441-2	JWP208K-441.2	Rubber Foot		2
442	GB5781	Hex Cap Screw	M10 x 70	1
443	GB96	Flat Washer	10mm	2
444	GB6170	Hex Nut	M10	1
447	JWP208K-447	Key	5 x 5 x 30	1
542	JWP208K-542	Pedal Assembly		1
546	JWP208K-546	Plate Connecting Rod		1

Parts Breakdown for JWP-208K/JWP-208K HH Wood Planer -- Gearbox

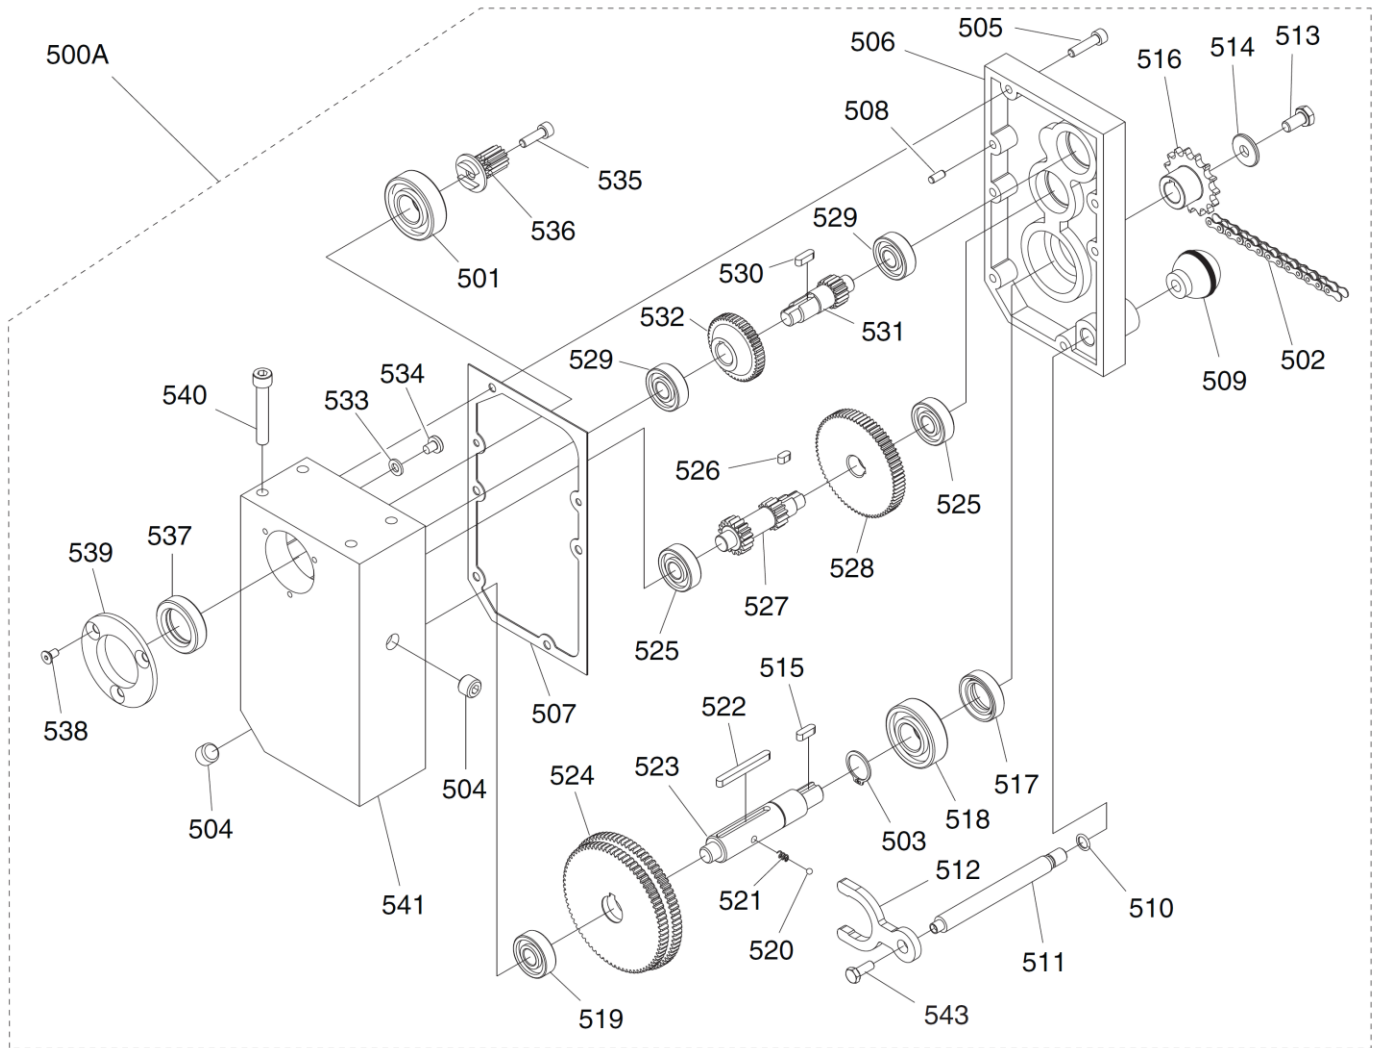

Parts List for JWP-208K/JWP-208K HH Wood Planer --- Gearbox

Index No.	Part No.	Description	Size	Qty.
500A	JWP208K-500A	Gearbox Assembly		1
501	GB276	Ball Bearing	6204-2RS	1
502	JWP208K-502	CHAIN 06B-1 X 51		
503	JWP208K-503	Extension Retaining Ring	20 mm	1
504	JWP208K-504	Oil Plug		2
505	GB70.1	Socket Cap Cap Screw	M6 x 25	5
506	JWP208K-506	Gearbox Base		1
507	JWP208K-507	Gasket		1
508	JWP208K-508	Pin	5 x 10	2
509	JWP208K-509	Ball Knob	M10	1
510	JWP208K-510	O-ring	10.8 x 2.4 P11	2
511	JWP208K-511	Handle Shaft		1
512	JWP208K-512	Shifting Fork		1
513	GB5781	Hex Cap Screw	M8 x 16	1
514	GB96	Flat Washer	8 mm	1
515	JWP208K-515	Key	5 x 5 x 16	1
516	JWP208K-516	Sprocket		1
517	JWP208K-517	Oil Seal	20 x 35 x 7	1
518	GB276	Ball Bearing	6204-2RS	1
519	GB276	Ball Bearing	6201-2RS	1
520	JWP208K-520	Steel Ball	4 mm	1
521	JWP208K-521	Compression Spring		1
522	JWP208K-522	Key	5 x 5 x 50	1
523	JWP208K-523	Shaft		1
524	JWP208K-524	Gear		1
525	GB276	Ball Bearing	6201-2RS	2
526	JWP208K-526	Key	5 x 5 x 10	1
527	JWP208K-527	Gear Shaft		1
528	JWP208K-528	Gear		1
529	GB276	Ball Bearing	6201-2RS	2
530	JWP208K-530	Key	5 x 5 x 14	1
531	JWP208K-531	Gear Shaft		1
532	JWP208K-532	Gear		1
533	GB96	Flat Washer	6 mm	1
534	GB818	Phillip Head Screw	M6 x 8	1
535	JWP208K-535	Socket Head Cap Screw	M6 x 20 LH	1
536	JWP208K-536	Gear	14T	1
537	JWP208K-537	Oil Seal	25 x 40 x 10	1
538	GB70.1	Socket Head Cap Screw	M5 x 12	3
539	JWP208K-539	Flange Cover		1
540	GB70.1	Socket Head Cap Screw	M8 x 50	4
541	JWP208K-541	Gear Box Cover		1
543	JWP208K-543	Flange Bolt	M6 x 12	1

Wiring Diagram for JWP-208K/JWP-208K HH Wood Planer

JR039..... ~ 400V, 50Hz

