



**JLTS-10L-M
JLTS-10L-T**

Light Table Saw

JR007 1 ~230V 50Hz

JR008 3~400V 50Hz

PARTS LIST




Импортер в РФ: ООО «ИТА Технолоджи»
105082, Москва, Переведеновский пер., д. 17
www.jettools.ru

Made in PRC / Сделано в КНР

P-JR007; JR008 2025-07

Parts Breakdown for JLTS-10L-M / JLTS-10L-T Light Table Saw -Part A

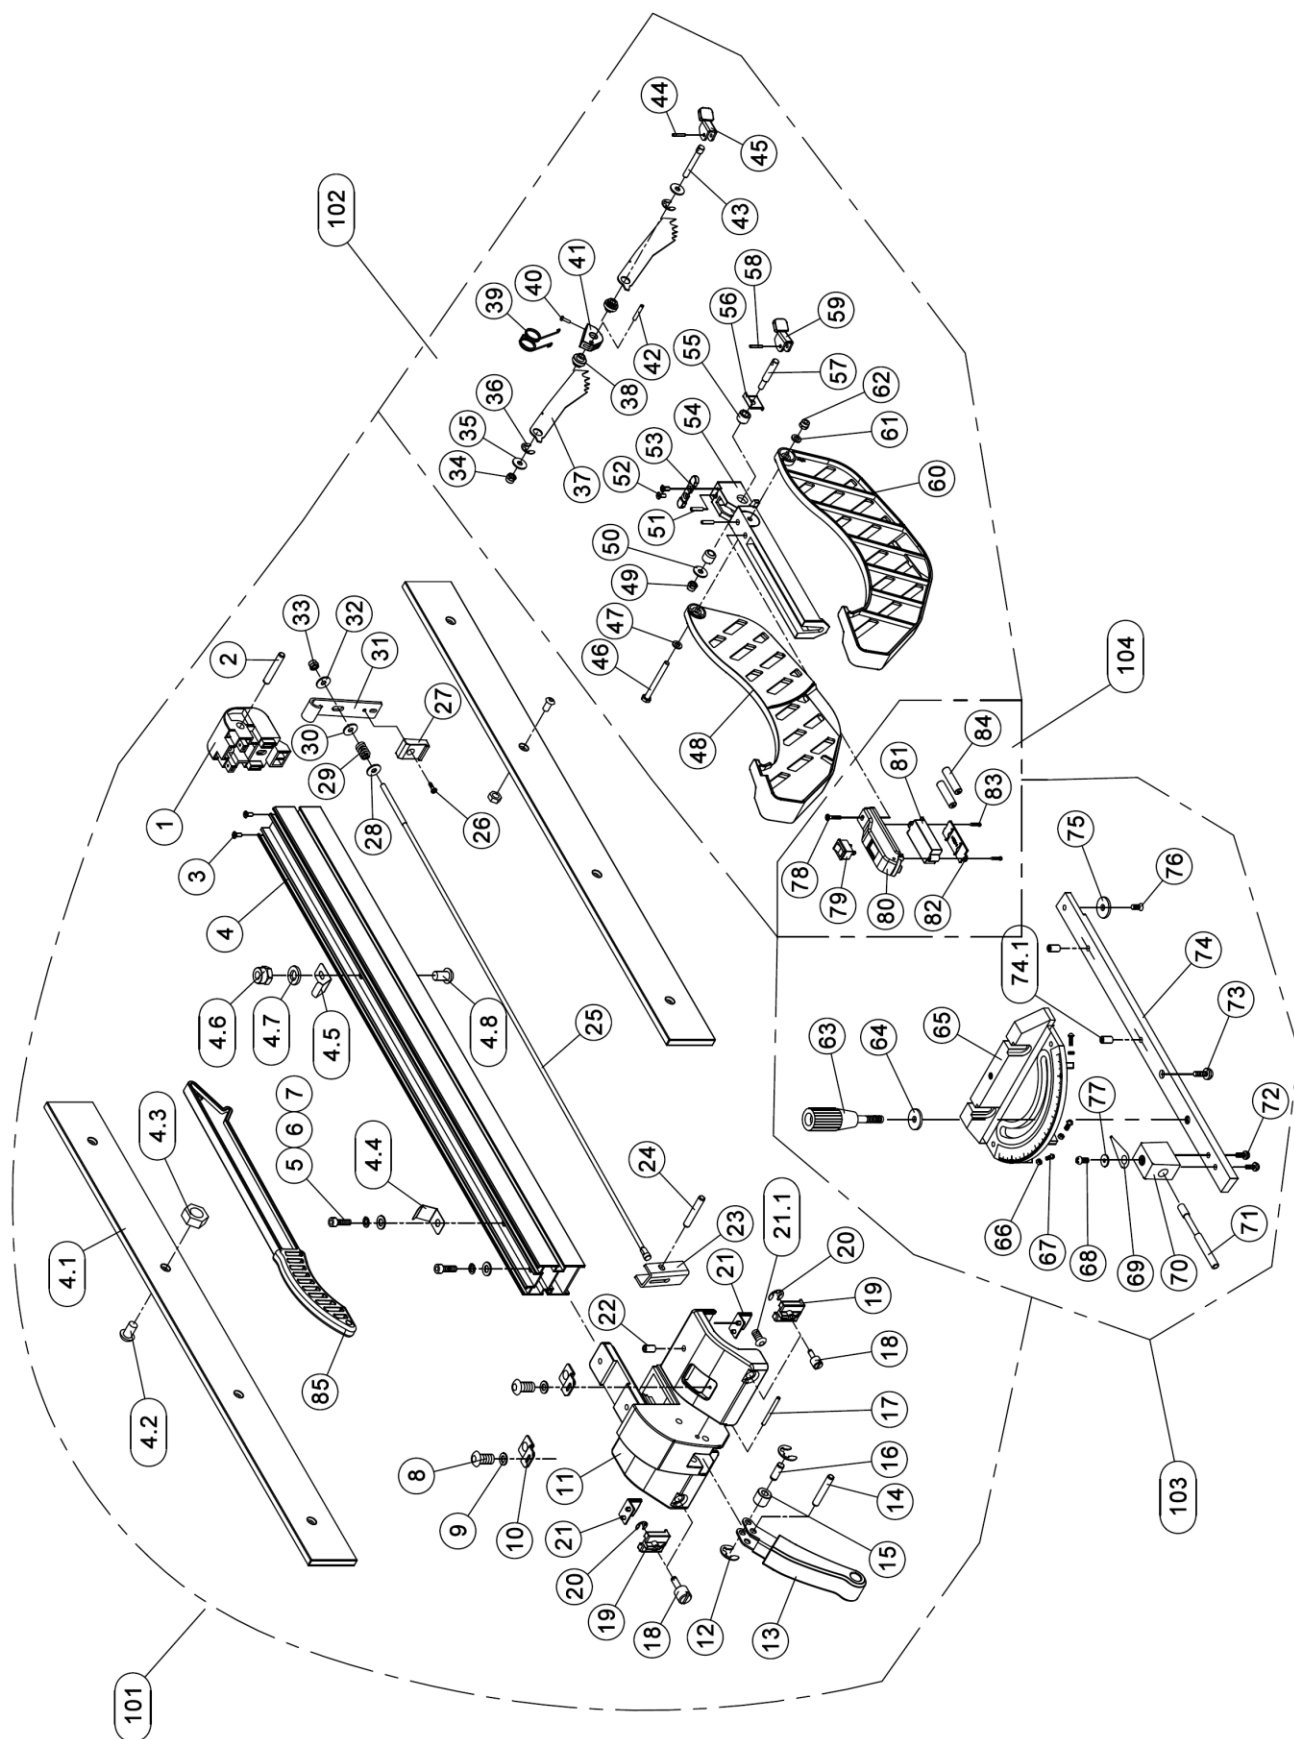


Parts List for JLTS-10L-M / JLTS-10L-T Light Table Saw -Part A

Index No.	Part No.	Description	Size	Qty
1	JLTS10-A001	Fence Rear Support		1
2	JLTS10-A002	Spring Pin	Ø10x50	1
3	JLTS10-A003	Thread Forming Screw	ST3.5x13	2
4	JLTS10-A004	Fence		1
4.1	JLTS10-A004.1	Guide Plate		2
4.2	TS-2246122	Socket Pan Head Screw	M6x12	8
4.3	TS-1540041	Hex Nut	M6	8
4.4	JLTS10L-A004.4	Push Stick Holder Piece		1
4.5	JLTS10L-A004.5	Push Stick Holder Piece		1
4.6	JLTS10L-A004.6	Acron Nut		1
4.7	TS-1550041	Flat Washer	6mm	1
4.8	TS-2246122	Socket Pan Head Screw	M6x12	1
5	TS-1504041	Socket Head Cap Screw	M8x20	2
6	TS-2361081	Lock Washer	8	2
7	TS-1550061	Flat Washer	8	2
8	TS-2244102	Socket Pan Head Screw	M4x10	2
9	TS-1550021	Flat Washer	4	2
10	JLTS10-A010	Pointer		2
11	JLTS10-A011	Fence Front Support		1
12	JLTS10-A012	Retaining Ring	6mm	2
13	JLTS10-A013	Locking Handle		1
14	JLTS10-A014	Spring Pin	Ø8x50	1
15	JLTS10-A015	Bushing		1
16	JLTS10-A016	Shaft		1
17	JLTS10-A017	Spring Pin	Ø5x50	1
18	JLTS10-A018	Adjusting Screw		2
19	JLTS10-A019	Adjusting Block		2
20	JLTS10-A020	Retaining Ring	4mm	2
21	JLTS10-A021	Sliding Pad		2
21.1	TS-2284082	Pan Head Cap Screw	M4x6	2
22	JLTS10-A022	Nylon Screw		2
23	JLTS10-A023	Front Locking Plate		1
24	JLTS10-A024	Spring Pin	8x50	1
25	JLTS10-A025	Rod		1
26	TS-1533032	Pan Head Cap Screw	M5x8	1
27	JLTS10-A027	Rear Locking Plate		1
28	TS-1550041	Flat Washer	6	1
29	JLTS10-A029	Spring		1
30	TS-1550041	Flat Washer	6	1
31	JLTS10-A031	Clamp		1
32	TS-1550041	Flat Washer	6	1
33	TS-1541021	Lock Nut	M6	1
34	TS-1541021	Lock Nut	M6	1
35	TS-1550041	Flat Washer	6	2
36	JLTS10-A036	Retaining Ring	9	2
37	JLTS10-A037	Kickback Pawl		2
38	JLTS10-A038	Bushing		2
39	JLTS10-A039	Spring		1
40	TS-2283102	Pan Head Cap Screw	M3X10	1
41	JLTS10-A041	Support Bracket		1
42	JLTS10-A042	Spring Pin	Ø4x30	1
43	JLTS10-A043	Pivot Pin		1
44	JLTS10-A044	Spring Pin	Ø4X12	1
45	JLTS10-A045	Latch		1

Parts List for JLTS-10L-M / JLTS-10L-T Light Table Saw -Part A

Index No.	Part No.	Description	Size	Q'ty
46	TS-1482101	Hex Cap Screw	M6x60	1
47	TS-1550041	Flat Washer	6	1
48	JLTS10-A048	Left Blade Guard		1
49	TS-1541021	Lock Nut	M6	1
50	TS-1550041	Flat Washer	6	1
51	TS-1522061	Socket Set Screw	M5x20	2
52	TS-2284121	Flat Head Screw	M4x10	2
53	JLTS10-A053	Support Plate		1
54	JLTS10-A054	Guard Case		1
55	JLTS10-A055	Bushing		2
56	JLTS10-A056	Plate		1
57	JLTS10-A057	Pivot Pin		1
58	JLTS10-A058	Spring Pin	Ø4x12	1
59	JLTS10-A059	Latch		1
60	JLTS10-A060	Right Blade Guard		1
61	TS-1550041	Flat Washer	6	1
62	TS-1541021	Lock Nut	M6	1
63	JLTS10-A063	Knob		1
64	TS-1550061	Flat Washer	8	1
65	JLTS10-A065	Miter Gauge		1
66	TS-1540021	Hex Nut	M4	3
67	TS-2284161	Pan Head Screw	M4x16	3
68	TS-2284121	Pan Head Screw	M4x10	1
69	JLTS10-A069	Pointer		1
70	JLTS10-A070	Block		1
71	JLTS10-A071	Pin		1
72	TS-2284121	Pan Head Cap Screw	M4x12	2
73	TS-2246162	Socket Pan Head Screw	M6x16	1
74	JLTS10-A074	Bar		1
74.1	JLTS10-A074.1	Tapered External Thread Screw–R1/8	R1/8	2
75	JLTS10-A075	Washer		1
76	TS-2286121	Flat Head Screw	M6x8	1
77	TS-1550021	Flat Washer	4mm	1
78	TS-2284202	Pan Head Cap Screw	M4x20	1
79	JLTS10-A079	Laser Switch		1
80	JLTS10-A080	Laser And Box Assembly		1
81	JLTS10-A081	Battery Box Assembly		1
82	JLTS10-A082	Battery Cover		1
83	JLTS10-A083	Thread Forming Screw	ST2.9x25	1
84	JLTS10-A084	AAA Battery		2
85	JLTS10-A085	Push Stick		1
101	JLTS10-A101	Fence Assembly (#1Thru 33)		1
102	JLTS10-A102	Blade Guard Assembly (#34Thru 62)		1
103	JLTS10-A103	Miter Gauge Assembly (#63Thru 77)		1
104	JLTS10-A104	Laser and Box Assembly (#78Thru 84)		1

Parts Breakdown for JLTS-10L-M / JLTS-10L-T Light Table Saw -Part B

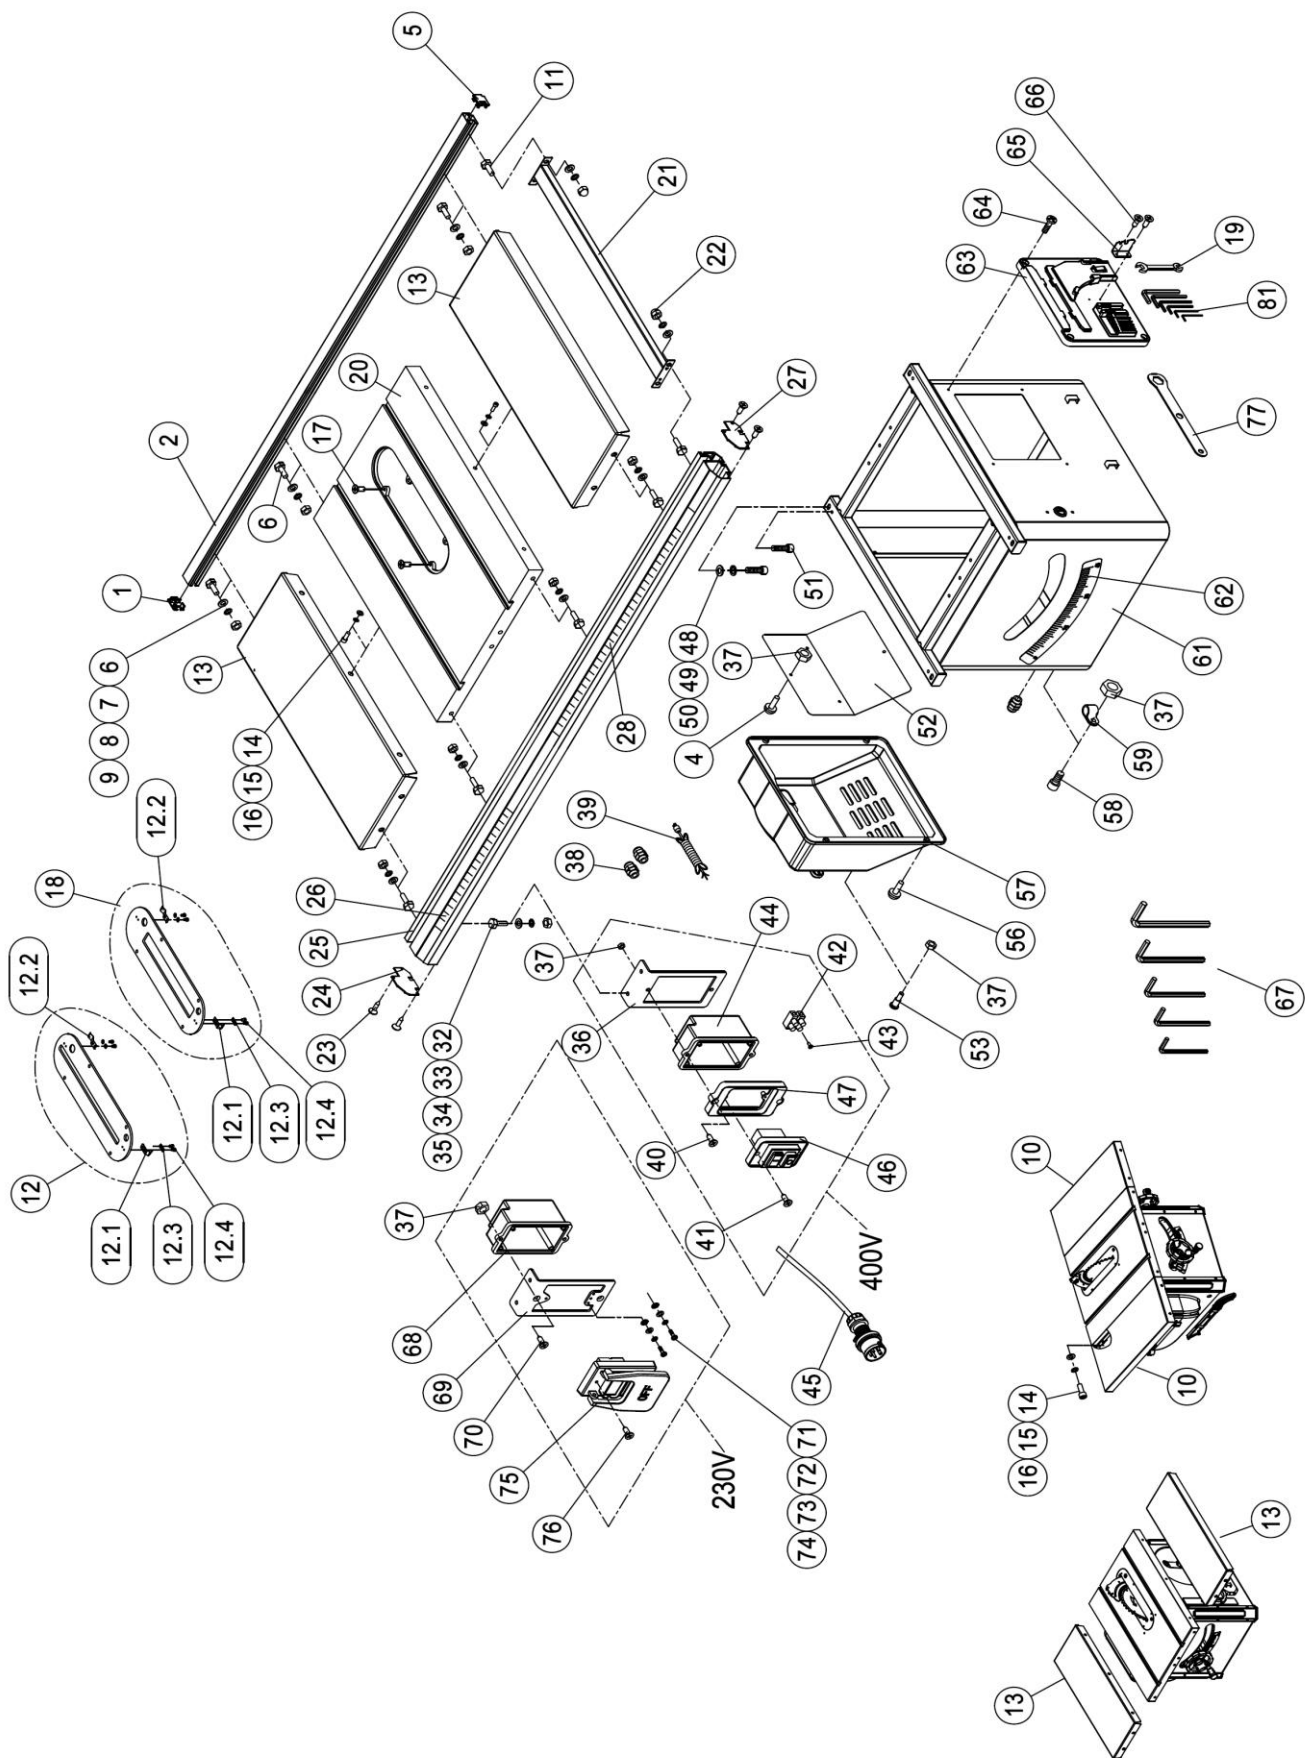

Parts List for JLTS-10L-M / JLTS-10L-T Light Table Saw -Part B


Index No.	Part No.	Description	Size	Qty
1	JLTS10-B001	Left Rear Rail Cap		1
2	JLTS10L-B002	Left Rear Rail		1
4	GB/T818	Pan Head Screw	M5x8	2
5	JLTS10-B005	Right Rear Rail Cap		1
6	TS-1490051	Hex Cap Bolt	M8x30	12
7	TS-1550061	Flat Washer	8	20
8	TS-2361081	Lock Washer	8	20
9	TS-2311081	Hex Nut	M8	12
10*	JLTS10L-B078	Table Extension--Cast Iron Wings---Left		2
11	TS-1524041	Socket Set Screw	M8x16	4
12	JLTS10L-B012A	Table Insert Assembly (#12.1 Thru #12.4)		1
12.1	JLTS10L-B012.1	Spring Plate A		2
12.2	JLTS10L-B012.2	Spring Plate B		2
12.3	GB/T 95	Flat Wahser	4mm	8
12.4	GB/T 70.1	Socket Head Cap Screw	M4x6	8
13	JLTS10-B013	Table Extension		2
14	TS-1505031	Socket Head Cap Screw	M10x25	6
15	TS-2361101	Lock Washer	10	6
16	TS-1550071	Flat Washer	10	6
17	GB819.1	Flat Head Screw	M5x16	4
18	JLTS10L-B018	Table Insert For Dado (#12.1 Thru #12.4)		1
19	JLTS10L-B019	Wrench	S=10-13mm	1
20	JLTS10L-B020A	Main Table		1
21	JLTS10-B021	Brace		1
22	JLTS10-B022	Lock Nut M8		4
23	JLTS10-B023	Thread Forming Screw	ST3.5x13	6
24	JLTS10-B024	Left Front Rail Cap		1
25	JLTS10-B025	Front Rail		1
26	JLTS10-B026	Left Scale		1
27	JLTS10L-B027	Right Front Rail Cap		1
28	JLTS10L-B028	Right Scale		1
32	TS-1482031	Hex Cap Screw	M6x16	2
33	TS-1550041	Flat Washer	6	2
34	TS-2361061	Lock Washer	6	2
35	TS-1540041	Hex Nut	M6	2
36	JLTS10-B036	Switch Mounting Plate		1
37	TS-1540031	Hex Nut	M5	9
38	JLTS10-B038	Strain Relief		3
39	JLTS10-B039	Power Cord With Plug For 230V		1
40	TS-1502051	Socket Head Cap Screw	M5x20	2
41	JLTS10-B041	Thread Forming Screw	ST3.5x16	2
42	JLTS10-B042	Terminal Block		1
43	JLTS10-B043	Thread Forming Screw	ST2.9x19	1
44	JLTS10-B044	Switch Box		1
45	JLTS10-B045	400v Plug	P551	1
46	JLTS10-B046	Switch For 400V	KJD18(400V)	1
47	JLTS10-B047	Switch Mounting Bracket		1
48	TS-1550061	Flat Washer	8	4
49	TS-2361081	Lock Washer	8	4
50	TS-1504041	Socket Head Cap Screw	M8x20	4
51	TS-1504061	Socket Head Cap Screw	M8x12	4
52	JLTS10L-B052	Cover Plate		1
53	GB/T818	Pan Head Screw	M5x8	2
56	TS-2246162	Socket Head Button Screw	M6x16	4
57	JLTS10L-B057	Left Cover For Box Base		1

Parts List for JLTS-10L-M / JLTS-10L-T Light Table Saw -Part C

Index No.	Part No.	Description	Size	Qty
58	TS-1502041	Socket Head Cap Screw	M5x16	1
59	JLTS10L-B059	Cord Clamp		1
61	JLTS10L-B061	Base Box		1
62	JLTS10L-B062	Angle Scale		1
63	JLTS10-B063	Support Block		1
64	TS-1503051	Socket Head Cap Screw	M6x20	4
65	JLTS10L-B065	Pawl Storage		1
66	JLTS10L-B066	Thread Forming Screw	ST3.5X9.5	2
67	JLTS10L-B067	3,4,5,6,8mm Hex Wrench		1
68	JLTS10-B068	Switch Box		1
69	JLTS10-B069	Switch Mounting Plate		1
70	JLTS10-B070	Flat Head Screw	M5X10	2
71	JLTS10-B071	Serrated Washer	4	2
72	TS-1550021	Flat Washer	4	2
73	TS-2361041	Lock Washer	4	2
74	TS-2284082	Pan Head Cap Screw	M4x8	2
75	JLTS10-B075	Switch For 230v	KJD17B(230V)	1
76	TS-1532052	Pan Head Screw	M4x16	2
77	JLTS10L-B077	Wrench	S=24mm	1
10A*	JR014	Table Extension Assembly-- Cast Iron Wings (#10,#13Thru 16)		1

* Optional Accessory – see your dealer to order.

Parts Breakdown for JLTS-10L-M / JLTS-10L-T Light Table Saw-- Part C

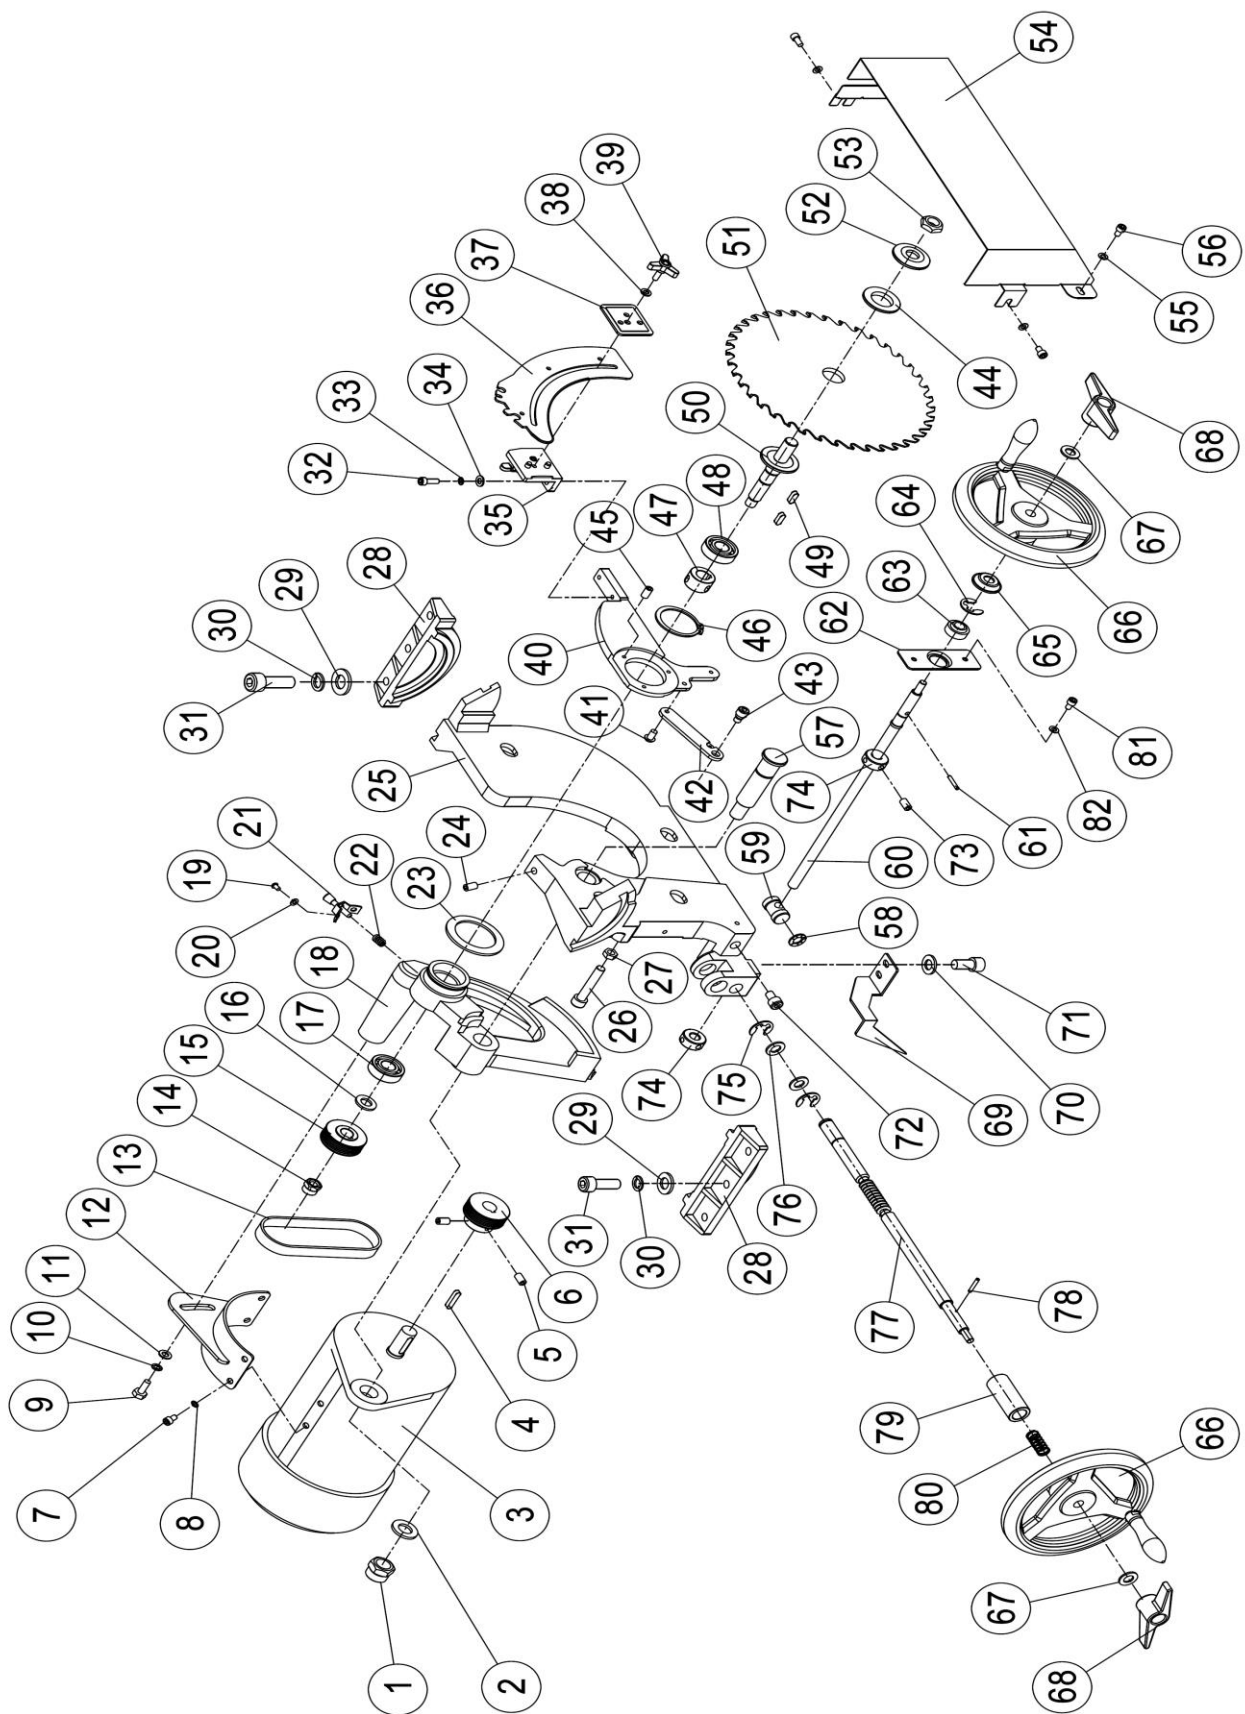


Parts List for JLTS-10L-M / JLTS-10L-T Light Table Saw -Part C

Index No.	Part No.	Description	Size	Qty
1	TS-2342161	Lock Nut	M16	1
2	TS-155010	Flat Washer	16 mm	1
3	JLTS10-C003M	Motor Assembly	P2=1.5kW 50Hz, 230V	1
	JLTS10-C003T	Motor Assembly	P2=1.8kW 50Hz, 400V	1
	JLTS10-C003RC	Running Capacitor (Not Shown)	40uf, 450V	1
	JLTS10-C003JB	Junction Box (Not Shown)		1
	JLTS10-C003JBC	Junction Box Cover (Not Shown)		1
	JLTS10-C003MF	Motor Fan (Not Shown)		1
	JLTS10-C003MFC	Motor Fan Cover (Not Shown)		1
4	JLTS10-C004	Key	5x5x30	1
5	TS-1523021	Socket Set Screw	M6x8	1
6	JLTS10-C006	Motor Pulley		1
7	TS-1503021	Socket Head Cap Screw	M6x10	4
8	TS-1550041	Flat Washer	6	4
9	TS-1490021	Hex Cap Screw	M8x16	1
10	TS-2361081	Lock Washer	8	1
11	TS-1550061	Flat Washer	8	1
12	JLTS10-C012	Motor Support Bracket		1
13	JLTS10-C013	Belt	6PJ145	1
14	TS-2342121	Lock Nut	M12	1
15	JLTS10-C015	Spindle Pulley		1
16	JLTS10-C016	Spacer		1
17	BB-6202VV	Ball Bearing	6202-2RS	1
18	JLTS10-C018	Blade And Motor Support Case		1
19	TS-1533042	Pan Head Cap Screw	M5x12	2
20	TS-1550031	Flat Washer	5	2
21	JLTS10-C021A	Blade Locking Assembly		1
	JLTS10-C021.1	Locking Ping		1
	JLTS10-C021.2	Knob		1
	JLTS10-C021.3	Support Plate		1
22	JLTS10-C022	Spring		1
23	JLTS10-C023	Spacer		1
24	TS-1525041	Socket Set Screw	M10x20	1
25	JLTS10L-C025	Main Trunnion		1
26	TS-1505061	Socket Head Cap Screw	M10x40	1
27	TS-1541041	Hex Nut	M10	1
28	JLTS10L-C028	Trunnion		2
29	TS-2361081	Flat Washer	8	6
30	TS-1550061	Lock Washer	8	6
31	TS-1504051	Socket Head Cap Screw	M8x25	6
32	TS-1503051	Socket Head Cap Screw	M6x20	2
33	TS-2361061	Lock Washer	6	2
34	TS-1550041	Flat Washer	6	2
35	JLTS10-C035A	Riving Knife Support Assembly		1
36	JLTS10-C036	Riving Knife		1
37	JLTS10-C037	Clamp		1
38	TS-1550041	Flat Washer	6	1
39	JLTS10-C039	Lock Knob		1
40	JLTS10-C040	Mounting Plate		1
41	JLTS10-C041	Rivet		1
42	JLTS10-C042	Connecting Plate		1
43	JLTS10-C043	Screw		1
44	JLTS10-C044	Arbor Spacer Sleeve	Ø15.875 x Ø30 x 2.8mm	1
45	TS-1522011	Socket Set Screw	M5x6	3
46	JLTS10-C046	Retaining Ring	50	1

Parts List for JLTS-10L-M / JLTS-10L-T Light Table Saw -Part C

Index No.	Part No.	Description	Size	Qty
47	JLTS10-C047	Bushing		1
48	BB-6203Z	Ball Bearing	6203-@S	1
49	JLTS10-C049	Key		2
50	JLTS10-C050	Arbor		1
51	JLTS10-C051A	Saw Blade	Ø254 x Ø30 x 2.8mm	1
52	JLTS10-C052	Flange		1
53	JLTS10-C053	Arbor Nut		1
54	JLTS10-C054	Lower Blade Guard		1
55	TS-1550041	Flat Washer	6	3
56	TS-1503021	Socket Head Cap Screw	M6x10	3
57	JLTS10-C057	Shaft		1
58	TS-2361201	Lock Washer	20	1
59	JLTS10-C059	Bevel Nut		1
60	JLTS10L-C060	Bevel Screw		1
61	JLTS10-C061	Spring Pin	3x20	1
62	JLTS10-C062	Bearing Fixing Plate		1
63	JLTS10-C063	Bearing		1
64	JLTS10-C064	Retaining Ring		1
65	JLTS10-C065	Bevel Locking Plate		1
66	JLTS10L-C066A	Handwheel Assembly		2
66.1	JLTS10L-C066.1	Handwheel		2
66.2	JLTS10-C066.2	Handle		2
67	TS-2361081	Flat Washer	8	2
68	JLTS10-C068	Lock Nut		2
69	JLTS10L-C069	Pointer		1
70	TS-1550041	Flat Washer	6	2
71	TS-1503021	Socket Head Cap Screw	M6x10	2
72	TS-1505011	Socket Head Cap Screw	M10x16	1
73	TS-2276081	Socket Set Screw	M6x8	4
74	JLTS10L-C074	Angle Stop Collar		1
75	JLTS10-C075	Retaining Ring	12	2
76	TS-155010	Flat Washer	16mm	2
77	JLTS10L-C077	Elevation Shaft		1
78	JLTS10-C078	Spring Pin	3x12	1
79	JLTS10L-C079	Bushing		1
80	JLTS10-C080	Spring		1
81	TS-1533042	Pan Head Cap Screw	M5x12	2
82	TS-1550031	Flat Washer	5	2

Parts Breakdown for JLTS-10L-M / JLTS-10L-T Light Table Saw -Part D

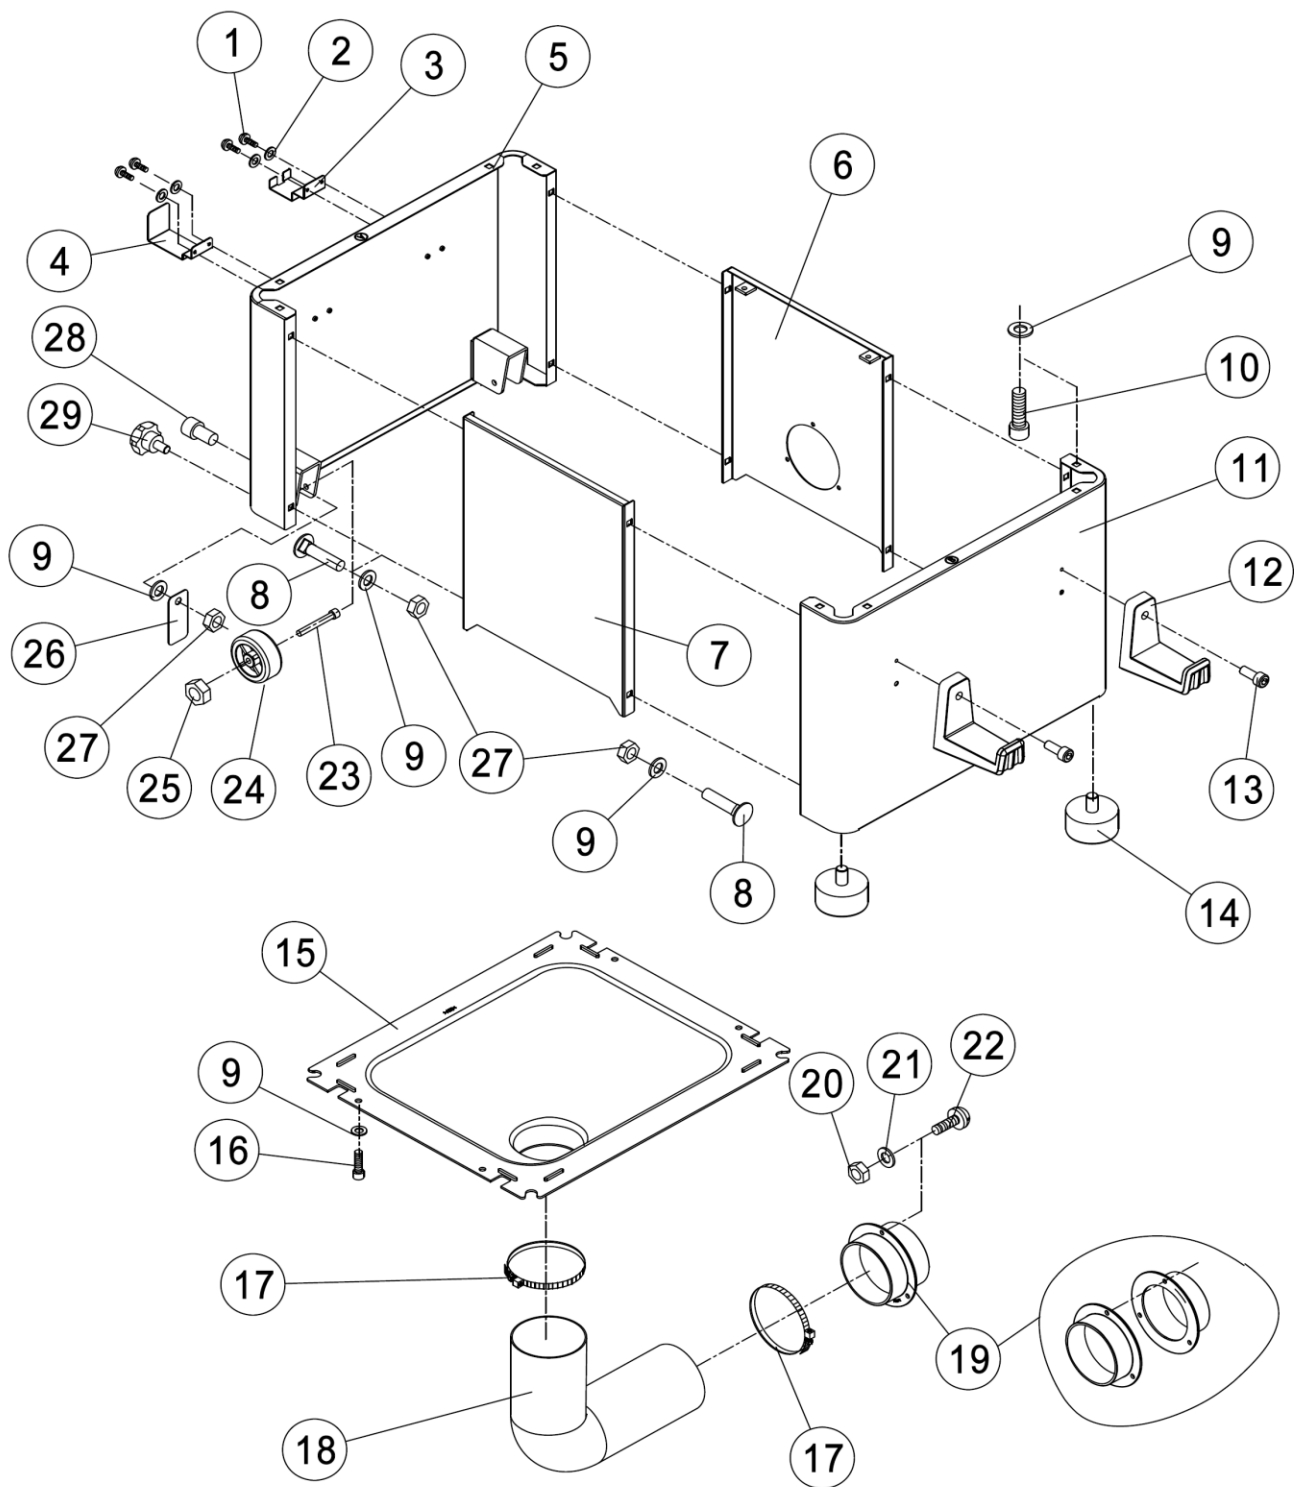

Parts List for JLTS-10L-M / JLTS-10L-T Light Table Saw -Part D


Index No.	Part No.	Description	Size	Qty
1	TS-2284082	Pan Head Cap Screw	M4x8	4
2	TS-1550021	Flat Washer	4	4
3	JLTS10L-D003	Rear Blade Guard Bracket		1
4	JLTS10L-D004	Front Blade Guard Bracket		1
5	JLTS10L-D005	Left Panel		1
6	JLTS10L-D006	Rear Connecting Panel A		1
7	JLTS10L-D007	Front Connecting Panel B		1
8	JLTS10L-D008	Carriage Bolt	M8x16	8
9	TS-1550061	Flat Washer	8mm	18
10	GB70.1	Socket Head Cap Screw	M8x16	8
11	JLTS10L-D011	Right Panel		1
12	JLTS10L-D012	Fence Storage		2
13	TS-1503051	Socket Head Cap Screw	M6x20	2
14	JLTS10L-D014	Foot		4
15	JLTS10L-D015	Dust Chute		1
16	GB70.1	Socket Head Cap Screw	M8x16	4
17	JLTS10L-D017	Hose Clamp		2
18	JLTS10L-D018	Hose		1
19	JLTS10L-D019	Dust Exhaust Port		1
20	JLTS10-D020	Hex Nut	M6	3
21	JLTS10-D021	Flat Washer	6mm	3
22	JLTS10-D022	Lock Nut	M6x16	3
23	TS-1490091	Hex Cap Screw	M8x55	2
24	JLTS10L-D016	Castor Wheel		2
25	TS-1541031	Lock Nut	M8	2
26	JLTS10L-D018	Spring Piece		2
27	TS-1540061	Hex Nut	M8	2
28	TS-1504031	Socket Head Cap Screw	M8x20	2
29	JLTS10-D021	Lock Knob	M8x15	2
	JLTS10-WL	JET Warning Label(Not Shown)		1
	JLTS10L-ID	JET ID Label(Not Shown)		1
	JLTS10-ML	JET Motor Label(Not Shown)		1
	JET-LOGO	JET Logo With Adhesive (Not Shown)		1
		JET Model Logo With Adhesive		1

Wiring Diagram for JLTS-10L-M/JLTS-10L-T Light Table Saw

	colour of strands	Litzenfarben	couleur des cordons
BK	black	schwarz	noir
WH	white	weiß	blanc
BU	blue	blau	bleu
YE	yellow	gelb	jaune
RD	red	rot	rouge
BN	brown	braun	brun
GY	grey	grau	gris
GNYE	green-yellow	grün-gelb	vert-jaune
OG	orange	orange	orange
VT	violet	violett	violet

	meaning of symbol	Bedeutung der Zeichen	interprétation
M	motor	Motor	moteur
S	switch	Schalter	interrupteur
C	condenser	Kondensator	condensateur
E	electronic unit	Elektronik Einheit	unité électronique
F	fuse	Sicherung	fusible
RS	reversing switch	Drehrichtungsschalter	commu. droite/gauche
CS	centrifugal switch	Fliehkraftschalter	déclencheur centrifuge
OL	overload cut-off	Überlastschuttschalter	déclencheur surcharge
L	machine lamp	Maschinenleuchte	lampe
LS	limit switch	Positionsendschalter	micro

JR007; JLTS-10L-M..... ~ 230V, 50Hz

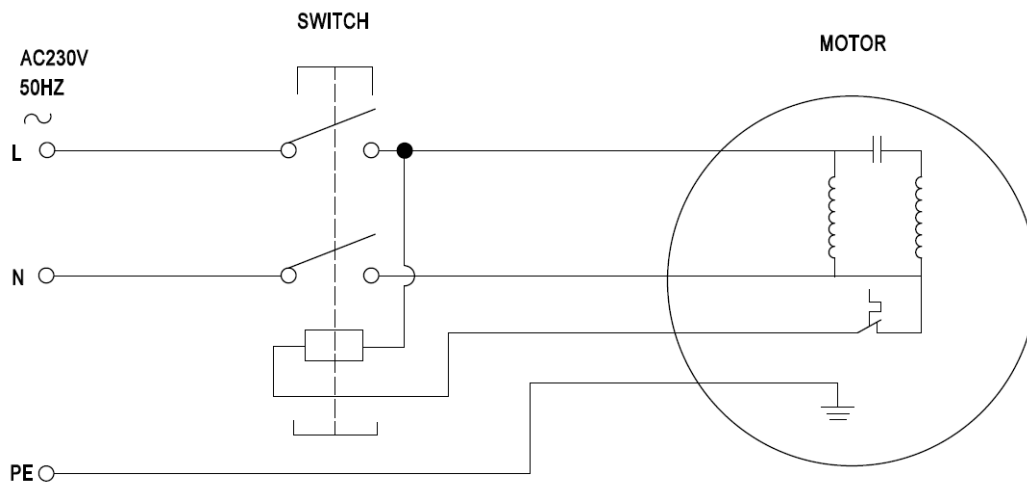

JR008 JLTS-10L-T..... 3~ 400V, 50Hz

