



JWSS-18B

Scroll Saw

JWSS-18B...727300BM...

1~ 230V, 50Hz

PARTS LIST

JPW (Tool) AG


Ackerstrasse 45, CH-8610 Uster, Switzerland

www.jettools.com



P-727300M 2019-05

JWSS-18B Upper & Lower Arm Assembly – Exploded View

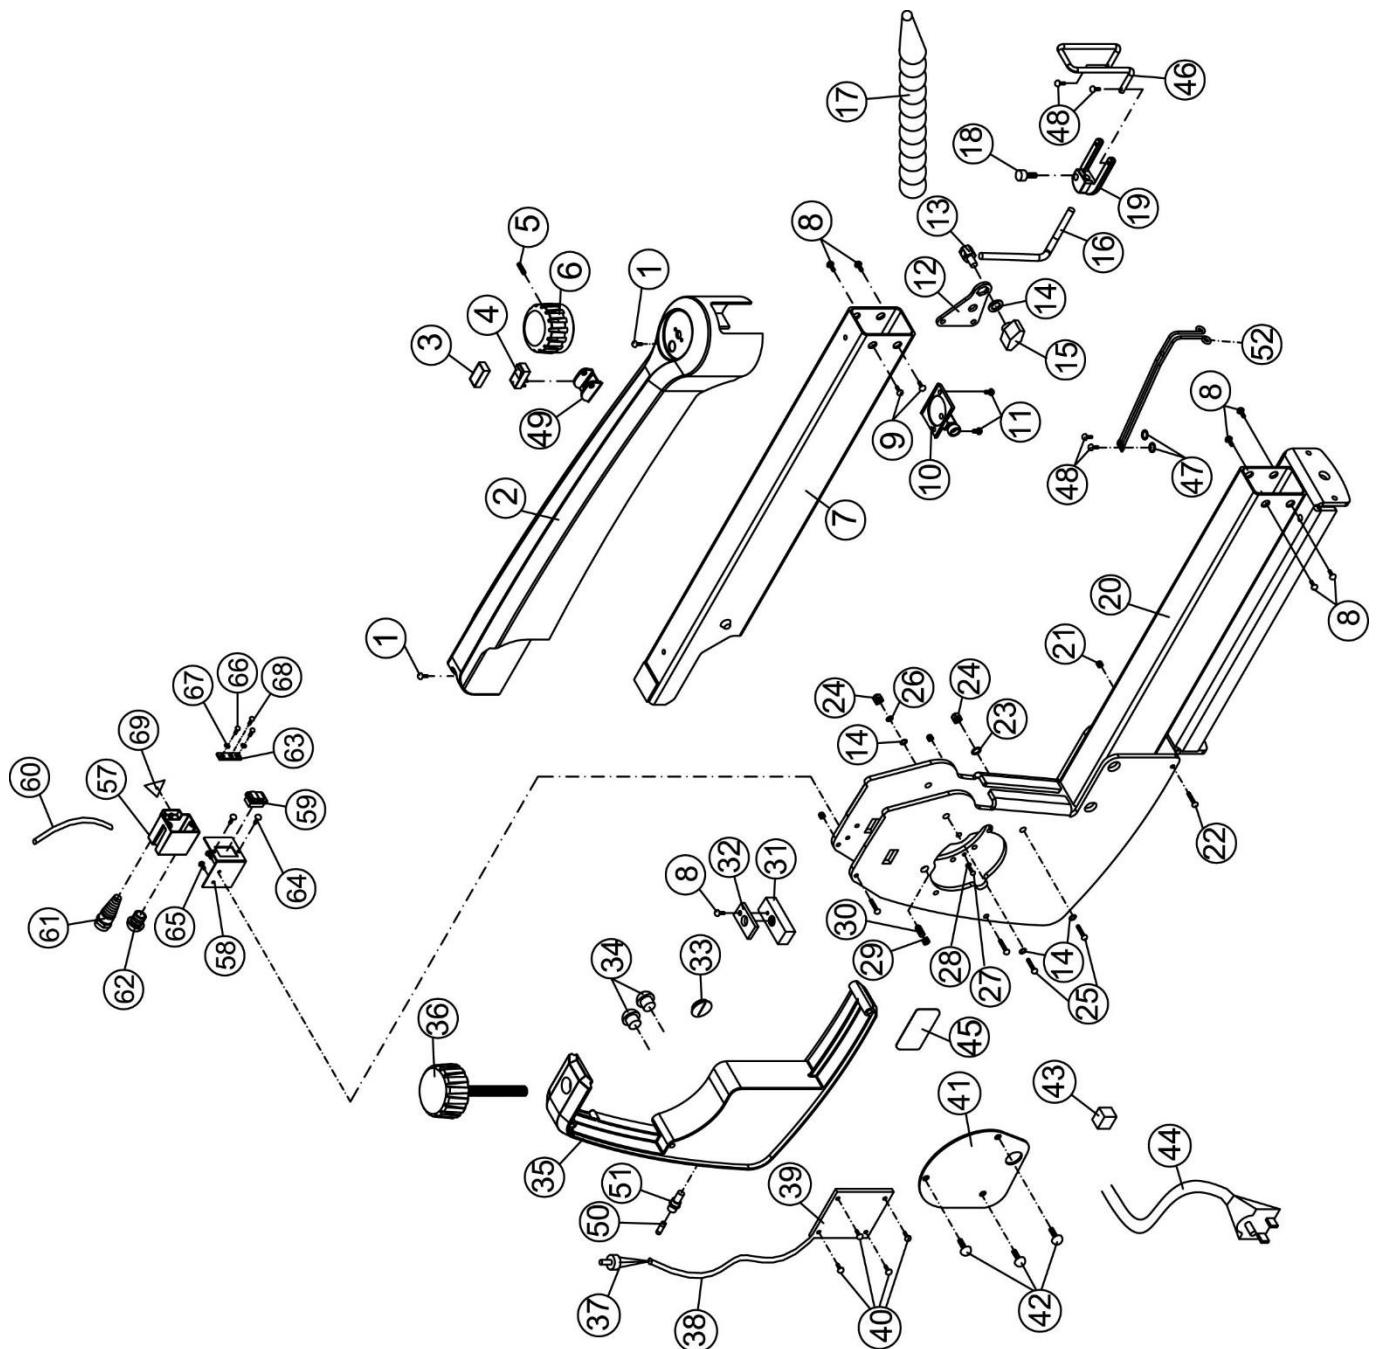

JWSS-18B Upper & Lower Arm Assembly – Parts List


Index No	Part No	Description	Size	Qty
1.....	F009668.....	Button Head Socket Screw	#10-32x1/4	2
2.....	JWSS18B-202.....	Top Cover		1
3.....	JWSS18B-203.....	Switch Rubber Cover		1
4.....	JWSS22B-204.....	Switch		1
5.....	TS-1521031.....	Socket Set Screw	M4x8	1
6.....	JWSS22B-206.....	VR Knob with Speed Label.....		1
7.....	JWSS18B-207.....	Upper Arm.....		1
8.....	F009916.....	Button Head Socket Screw	#10-32x5/16	7
9.....	F009670.....	Button Head Socket Screw	#10-32x3/8	2
10.....	JWSS22B-210.....	Dust Blower		1
11.....	TS-081B022	Pan Head Screw	#8-32x3/8	2
12.....	JWSS22B-212.....	Hold Down Mount Plate		1
13.....	JWSS22B-213.....	Hold Down Clamp Screw		1
14.....	TS-0680021.....	Flat Washer	1/4"	4
15.....	JWSS22B-215.....	Hold Down Clamp Knob		1
16.....	JWSS22B-216.....	Hold Down Bar		1
17.....	JWSS22B-217.....	Air Nozzle		1
18.....	TS-0206022.....	Socket Head Cap Screw	#10-32x1/2	1
19.....	JWSS22B-219.....	Hold Down Fork		1
20.....	JWSS18B-220E.....	Main Body		1
21.....	5508073	Hex Nylon Lock Nut	#10-32	3
22.....	F009917.....	Button Head Socket Screw	#10-32x2-1/4	3
23.....	TS-0680021.....	Flat Washer	1/4	1
24.....	TS-0640071.....	Hex Nylon Lock Nut	1/4-20	2
25.....	F009918.....	Button Head Socket Screw	1/4-20x2-1/2	2
26.....	TS-130205.....	Lock Washer	1/4	1
27.....	TS-081B012	Phillips Pan Head Machine Screw	#8-32x1/4	2
28.....	TS-0720041.....	External Tooth Lock Washer	#8	2
29.....	TS-0561031.....	Hex Nut	3/8-16	1
30.....	JWSS22B-230.....	Ball Set Screw	3/8-16x5/8	1
31.....	JWSS22B-231.....	Housing Cross Block		1
32.....	JWSS22B-232.....	Cross Block Retainer		1

33.....	JWSS22B-233.....Cap	1
34.....	JWSS22B-234.....Strain Relief	2
35.....	JWSS22B-235.....Control Box.....	1
36.....	JWSS22B-236.....Arm Adjustment Knob.....	1
	JWSS22B-237AEPC Board with VR (#37,38,39)	1
37.....Variable Resistor	1
38.....Control Cable.....	1
39.....	JWSS22B-239EPC Board.....	1
40.....	JWSS22B-240.....Machine Screw	M4x8
41.....	JWSS22B-241.....Cover Plate	1
42.....	TS-0254021.....Button Head Socket Screw	1/4-20x1/2.....
43.....	JWSS22B-243.....Sponge Block	1
44.....	JWSS22B-244EPower Cord.....	3x18AWG
45.....	JET-92JET Logo.....	92x38mm
46.....	JWSS22B-246.....Upper Blade Guard.....	1
47.....	TS-2361041.....Lock Washer	M4
48.....	TS-081B022Phillips Pan Head Machine Screw	#8-32x3/8
49.....	JWSS22B-249.....Switch Protector.....	1
50.....	JWSS22B-250EFuse	5 A
51.....	JWSS22B-251.....Fuse Holder	1
52.....	JWSS22B-252.....Lower Blade Guard.....	1
55.....	LM000188E.....Warning Label (not shown)	49x100mm
56.....	LM000337EID Label, JWSS-18B (not shown).....	1
57.....	JWL1015-168.....Switch Box.....	1

Index No	Part No	Description	Size	Qty
58.....	JWSS22B-258E	Bracket		1
59.....	JWSS22B-259E	Magnetic Switch.....		1
60.....	JWSS22B-260E	Connection Cable		1
61.....	JWSS22B-261E	Cable Protector		1

62.....	JML-70E	Strain Relief	PG 9	1
63.....	JWL1015-171	Ground Plate		1
64.....	TS-081C022	Pan Head Screw	#10-24x3/8"	2
65.....	TS-1533032.....	Pan Head Screw.....	M5x10	2
66.....	JWSS22B-266E.....	Pan Head Screw.....	M5x6	2
67.....	TS-0733041.....	External Tooth Lock Washer.....	¼"	2
68.....	JWL1015-163	Tapping Screw	M3.5x6mm	1
69.....	3520A-289E	Warning Label		1
70.....	JWSS22B-267	Cable, Main Switch to PCB (not shown)		1

JWSS-18B Table & Cabinet Assembly – Exploded View

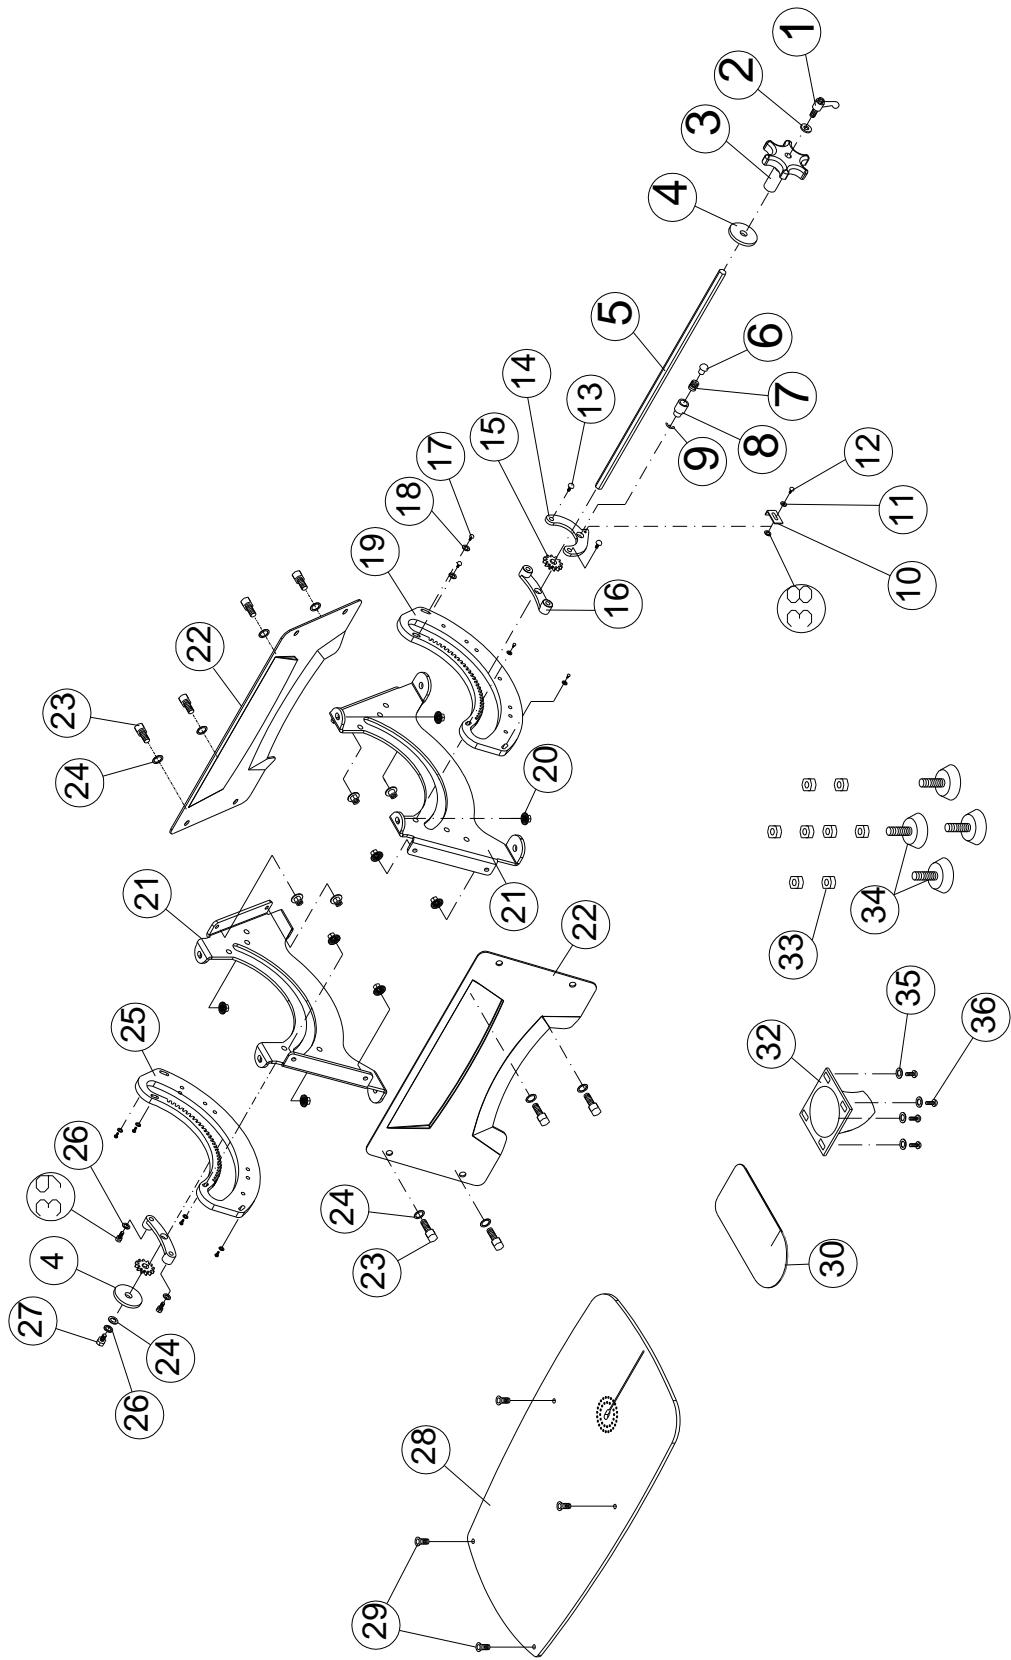


JWSS-18B Table & Cabinet Assembly – Parts List

Index No	Part No	Description	Size	Qty
1.....	JWSS22B-301.....	Blade Tilt Locking Lever		1
2.....	TS-0680021.....	Flat Washer	1/4	1
3.....	JWSS22B-303.....	Tilt Adjust Knob		1
4.....	JWSS22B-304.....	Blade Tilt Washer		2
5.....	JWSS18B-305.....	Tilt Lock Draw Rod.....		1
6.....	JWSS22B-306.....	Detent Plunger		1
7.....	JWSS22B-307.....	Spring		1
8.....	JWSS22B-308.....	Tilt Detent Barrel.....		1
9.....	JWSS22B-309.....	E-Ring	ETW-3	1
10.....	JWSS22B-310.....	Pointer		1
11.....	TS-1550021.....	Flat Washer	M4	1
12.....	TS-2284061.....	Phillips Pan Head Machine Screw	M4x6	1
13.....	TS-0254061.....	Button Head Socket Screw	1/4-20x1	2
14.....	JWSS22B-314.....	Angle Indicator Bracket		1
15.....	JWSS22B-315.....	Blade Tilt Drive Gear.....		2
16.....	JWSS22B-316.....	Angle Follower.....		2
17.....	F009916.....	Button Head Socket Screw	#10-32x5/16	8
18.....	TS-069204.....	Flat Washer	#10x12x1	8
19.....	JWSS22B-319.....	Front Trunnion Plate		1
20.....	JWSS22B-320.....	Hex Flange Nut	1/4-20UNC	12
21.....	JWSS22B-321.....	Trunnion		2
22.....	JWSS18B-322.....	Side Panel		2
23.....	TS-0254041.....	Button Head Socket Screw	1/4-20x3/4	8
24.....	TS-0680021.....	Flat Washer	1/4	9
25.....	JWSS22B-325.....	Rear Trunnion Plate		1
26.....	TS-0720071.....	Lock Washer	1/4	3
27.....	TS-0050011.....	Hex Cap Screw	1/4-20x1/2	1
28.....	JWSS18B-328.....	Table		1
29.....	TS-0245041.....	Socket Head Flat Screw	1/4-20x3/4	4
30.....	JWSS18B-330.....	Dust Collect Plate		1
32.....	JWSS18B-332.....	Dust Port	1-1/2 OD	1
33.....	TS-0561082.....	Hex Nut	3/8-16	8

34.....	JWSS22B-334.....	Leveling Foot	3/8-16x1-1/4	4
35.....	TS-0692031.....	Flat Washer	#8.....	4
36.....	F009924.....	Button Head Socket Screw	#8-32x5/16	4
38.....	TS-0720051.....	External Tooth Washer.....	M4	1
39.....	TS-0050031.....	Hex Cap Screw	1/4-20x3/4.....	2
	JWSS22B-335.....	Blade Rack (Option, not shown)		1

JWSS-22B Drive Link Assembly – Exploded View

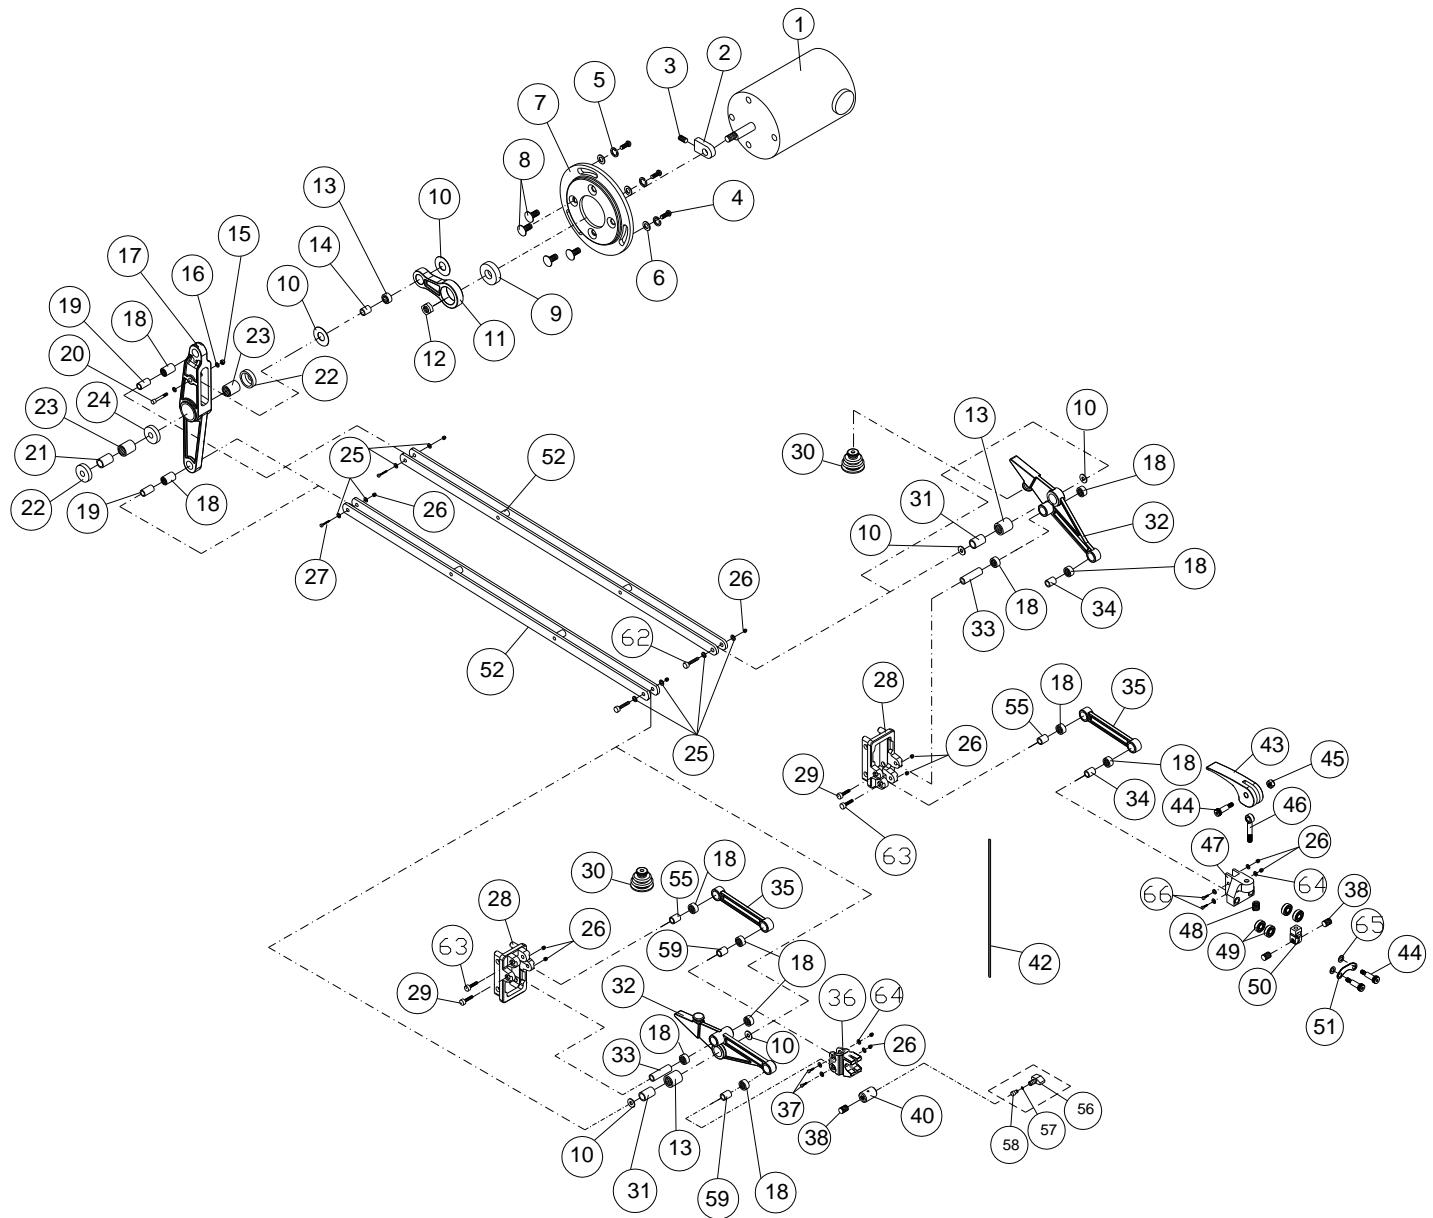

JWSS-18B Drive Link Assembly – Parts List


Index No	Part No	Description	Size	Qty
1.....	JWSS22B-401E	Motor		.1
	JWSS22B-MCB	Motor Carbon Brush (not shown)		.2
	JWSS22B-MCBC	Motor Carbon Brush Cap (not shown)		.2
	LM000190E	Motor Label, (not shown)		.1
2.....	JWSS22B-402	Balance Block		.1
3.....	TS-1523011	Socket Set Screw	M6x6	.1
4.....	TS-0254021	Button Head Socket Screw	1/4-20x1/2	.3
5.....	TS-0720071	Lock Washer	1/4	.3
6.....	TS-0680021	Flat Washer	1/4	.3
7.....	JWSS22B-407	Motor Cover Plate		.1
8.....	TS-1514021	Socket Head Flat Screw	M6x16	.4
	JWSS18B-CDLA	Complete Drive Link Assembly (#9 thru 27, #52)		.1
9.....	BB-608ZZ	Ball Bearing	608ZZ	.1
10.....	TS-1550061	Flat Washer	M8	.6
11.....	JWSS22B-411	Motor Cam		.1
12.....	JWSS22B-412	Nut	M8xP1.25LH	.1
13.....	JWSS22B-413	Bearing	810	.3
14.....	JWSS22B-414	Inner Bearing Sleeve	Ø8.046x21.5mm	.1
15.....	TS-1541011	Hex Nylon Lock Nut	M5	.1
16.....	TS-1550031	Flat Washer	M5	.2
17.....	JWSS22B-417	Rocker Cam		.1
18.....	JWSS22B-418	Bearing	0609	.12
19.....	JWSS22B-419	Inner Bearing Sleeve (Long)	Ø6.03x16.5mm	.2
20.....	F005667	Socket Head Cap Screw	M5x28	.1
21.....	JWSS22B-421	Main Rocker Pivot	Ø14.04x35.50mm	.1
22.....	JWSS22B-422	Bearing Cover		.2
23.....	JWSS22B-423	Bearing	1412	.2
24.....	JWSS22B-424	Bushing		.1
25.....	TS-1550021	Flat Washer	M4	.8
26.....	TS-1541001	Hex Nylon Lock Nut	M4	.12
27.....	TS-1501071	Socket Head Cap Screw	M4x25	.6

28.....	JWSS22B-428.....	Rocker Mount.....		2
29.....	F005359.....	Socket Head Cap Screw	M4x45	2
30.....	JWSS22B-430.....	Air Pump Bellows		2
31.....	JWSS22B-431.....	Inner Bearing Sleeve – Front Rocker	Ø8.03x18.40mm	2
32.....	JWSS22B-432.....	Front Rocker		2
33.....	JWSS22B-433.....	Inner Bearing Sleeve (Long).....	Ø6.03x37mm	2
34.....	JWSS22B-434.....	Inner Bearing Sleeve.....	Ø6.03x16mm	2
35.....	JWSS22B-435.....	Strut.....		2
	JWSS22B-NLBCK	New Lower Blade Chuck Kit (#26,36,37,59,64)		1
	<i>Serial no. 18010446 and higher</i>			
36.....	JWSS22B-436A	Lower Blade Chuck with Magnet.....		1
37.....	F005668.....	Socket Head Cap Screw	M4x22	2
38.....	JWSS22B-438.....	Set Screw	M6x5	5
	727201	Lower Blade Holder Assembly (#38, 40, 56 thru 58), set of 3		1
40.....	JWSS22B-440.....	Lower Blade Holder		2
42.....	JWSS22B-442.....	Blade.....	0.36mm (t) x 1.1mm (W) x 130mm (L) x 11 TPI.....	5
43.....	JWSS22B-443.....	Tension Lever		1
44.....	JWSS22B-444.....	Screw		3
45.....	TS-1541011.....	Hex Nylon Lock Nut	M5	1
46.....	JWSS22B-446.....	Bolt		1
47.....	JWSS22B-447.....	Upper Blade Chuck		1
48.....	JWSS22B-448.....	Spring		1
49.....	JWSS22B-449.....	Bearing	R4ZZ.....	4
50.....	JWSS22B-450.....	Blade Clamp Assembly (includes #38)		1
51.....	JWSS22B-451.....	Plate		1
52.....	JWSS18B-452.....	Drive Link Assembly.....		2

Index No	Part No	Description	Size	Qty
55.....	JWSS22B-455.....	Inner Bearing Sleeve (Short).....	Ø6.03x21mm	2
	JWSS22B-TSA.....	Thumb Screw Assembly (#56 thru 58).....		1
56.....	JWSS22B-456.....	Thumb Screw.....		1

57.....	JWSS22B-457.....O-Ring.....	1
58.....	JWSS22B-458.....Press Bar.....	1
59.....	JWSS22B-459AInner Bearing Sleeve.....Ø6.03x14.2mm.....	1
62.....	F005673.....Socket Head Cap Screw	M4x27
63.....	TS-1501081.....Socket Head Cap Screw	M4x30
64.....	TS-1550021.....Flat Washer	M4
65.....	TS-1550041.....Flat Washer	M6
66.....	F005672.....Socket Head Cap Screw	M4x24

Stand (OPTIONAL) for JWSS-18B Scroll Saw – Exploded View

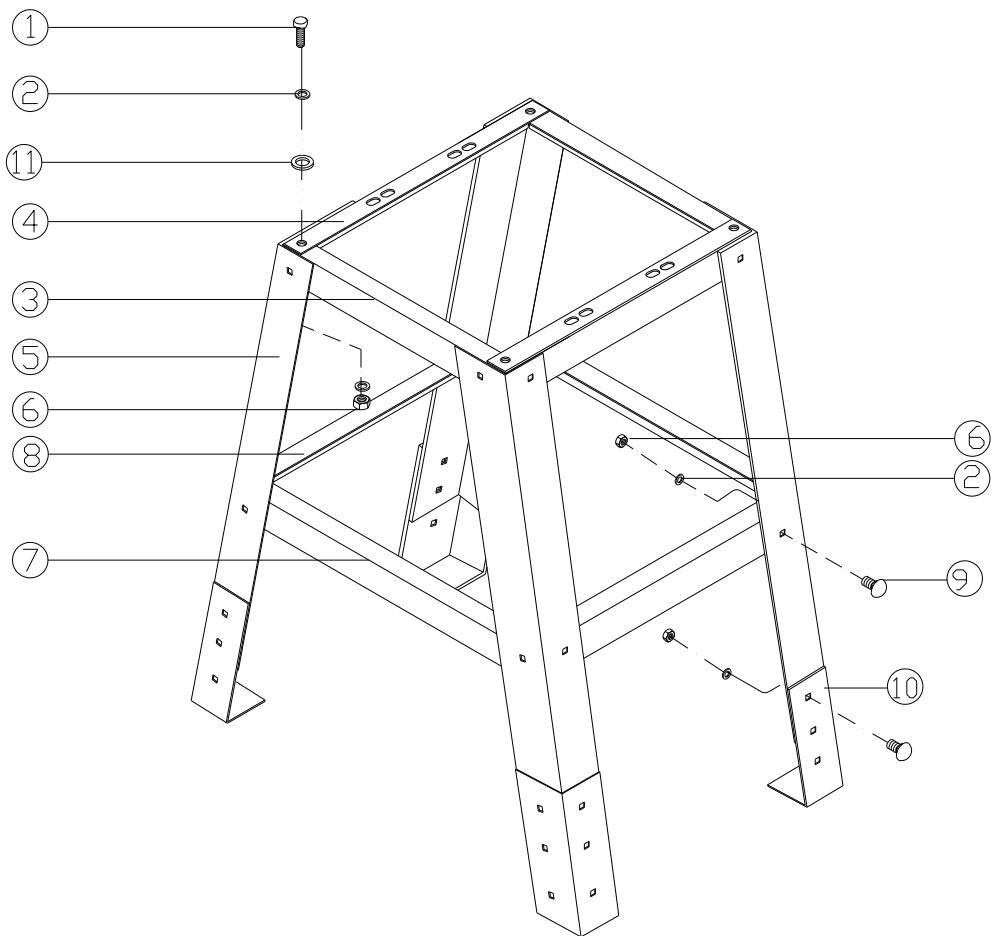

Stand (OPTIONAL) for JWSS-18B Scroll Saw – Parts List

Index No	Part No	Description	Size	Qty
.....	727300S.....	Stand for Scroll Saw (#1 thru 10).....		
1.....	TS-0051051.....	Hex Cap Screw	5/16"-18 x 1"	4
2.....	TS-0680031.....	Flat Washer	5/16"	32
3.....	JWSS22B-103.....	Top Short Brace	14-1/2"L	2


4.....	JWSS18B-104.....Top Long Brace.....	16-5/8" L	2
5.....	JWSS22B-105.....Leg	4
6.....	TS-0570021.....Hex Nut.....	5/16"-18	28
7.....	JWSS22B-107.....Bottom Short Brace.....	19-3/8" L	2
8.....	JWSS22B-108.....Bottom Long Brace.....	21-1/2" L	2
9.....	JWSS22B-109.....Round Hd. Carriage Bolt, b.oxide	5/16"-18 x 1/2"	24
10.....	JWSS22B-110.....Leg Extension	4
11.....	JWSS22B-111.....Rubber washer (included with saw hardware)	4
.....	JWSS22B-SHK	Stand Hardware Kit (#1,2,6,9)

JWSS-18B..727300BM....1~230V,50Hz

	colour of strands	Litzenfarben	couleur des cordons
BK	black	schwarz	noir
WH	white	weiß	blanc
BU	blue	blau	bleu
YE	yellow	gelb	jaune
RD	red	rot	rouge
BN	brown	braun	brun
GY	grey	grau	gris
GNYE	green-yellow	grün-gelb	vert-jaune
OG	orange	orange	orange
VT	violet	violett	violet

	meaning of symbol	Bedeutung der Zeichen	interprétation
M	motor	Motor	moteur
S	switch	Schalter	interrupteur
C	condenser	Kondensator	condensateur
E	electronic unit	Elektronik Einheit	unité électronique

F	fuse	Sicherung	fusible
RS	reversing switch	Drehrichtungsschalter	commu. droite/gauche

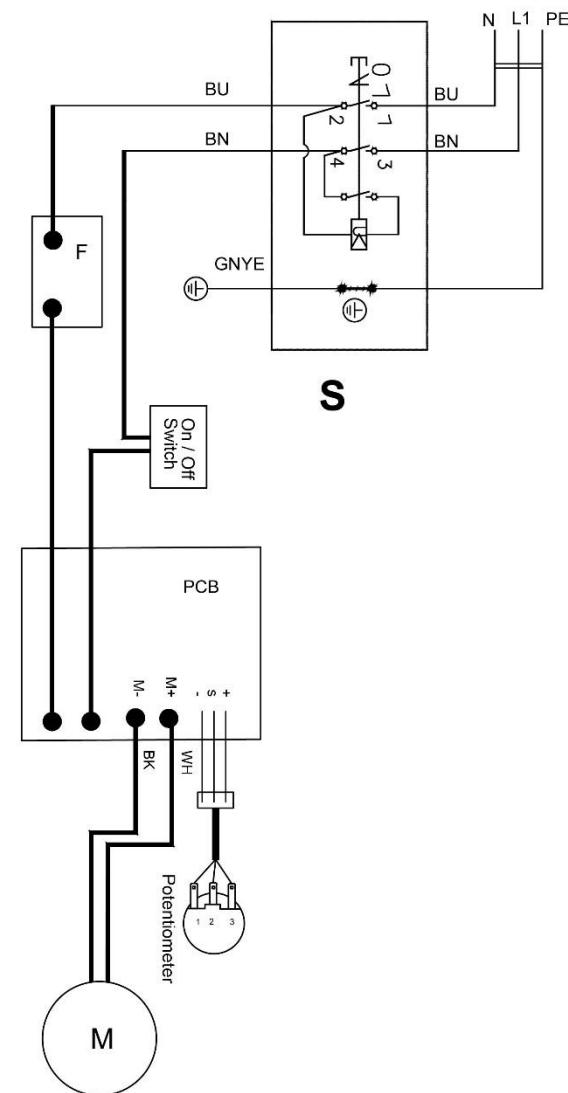

CS	centrifugal switch	Fliehkraftschalter	déclencheur centrifuge
OL	overload cut-off	Überlastschutzschalter	déclencheur surcharge
LS	limit switch	Positionendschalter	micro